

# GeoMax Zoom80 Series

---



# Introduction

---

## Purchase

Congratulations on the purchase of a Zoom80 series instrument.

---



This manual contains important safety directions as well as instructions for setting up the product and operating it. Refer to "6 Safety Directions" for further information.

Read carefully through the User Manual before you switch on the product.

---

## Product identification

The type and serial number of your product are indicated on the type plate. Enter the type and serial number in your manual and always refer to this information when you need to contact your agency or GeoMax authorised service workshop.





Type: \_\_\_\_\_

Serial No.: \_\_\_\_\_

---

## Symbols

The symbols used in this manual have the following meanings:

Type	Description
 <b>DANGER</b>	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
 <b>WARNING</b>	Indicates a potentially hazardous situation or an unintended use which, if not avoided, could result in death or serious injury.
 <b>CAUTION</b>	Indicates a potentially hazardous situation or an unintended use which, if not avoided, may result in minor or moderate injury and/or appreciable material, financial and environmental damage.
	Important paragraphs which must be adhered to in practice as they enable the product to be used in a technically correct and efficient manner.

## Trademarks



- Windows is a registered trademark of Microsoft Corporation in the United States and other countries
- CompactFlash and CF are trademarks of SanDisk Corporation
- Bluetooth is a registered trademark of Bluetooth SIG, Inc.

All other trademarks are the property of their respective owners.

**Validity of this manual**

	Description
<b>General</b>	This manual applies to all Zoom80 series instruments and Zoom80 C controller. Where there are differences between the models they are clearly described.
<b>Telescope</b>	<ul style="list-style-type: none"> <li>• <b>Measuring with IR mode:</b> When measuring distances to a reflector with EDM mode "IR", the telescope uses a wide visible red laser beam, which emerges coaxially from the telescope's objective.</li> <li>• <b>Measuring with RL mode and LO mode:</b> When measuring distances with EDM modes "RL" and "LO", the telescope uses a narrow visible red laser beam, which emerges coaxially from the telescope's objective.</li> </ul>

## Available documentation

Name	Description/Format		
Zoom80 Quick Guide	Provides an overview of the product together with technical data and safety directions. Intended as a quick reference guide.	✓	✓
Zoom80 User Manual	All instructions required in order to operate the product to a basic level are contained in the User Manual. Provides an overview of the product together with technical data and safety directions.	-	✓
Zoom80 Technical Reference Manual	Overall comprehensive guide to the system and program functions. Included are detailed descriptions of special software/hardware settings and software/hardware functions intended for technical specialists.	-	✓

**Refer to the following resources for all Zoom80 documentation/software:**

- the GeoMax Zoom80 DVD
- [www.geomax-positioning.com](http://www.geomax-positioning.com)

# Table of Contents

In this manual	Chapter	Page
	<b>1 Description of the System</b>	<b>11</b>
	1.1 System Components	11
	1.2 System Concept	17
	1.2.1 Software Concept	17
	1.2.2 Power Concept	19
	1.2.3 Data Storage and Data Conversion Concept	20
	1.3 Container Contents	22
	1.4 Components	23
	1.4.1 Instrument	23
	1.4.2 Controller	26
	<b>2 User Interface</b>	<b>28</b>
	2.1 Keyboard	28
	2.1.1 Instrument	28
	2.1.2 Controller	32
	2.2 Screen	35
	2.3 Operating Principles	37
	2.3.1 Instrument	43

2.3.2	Controller	44
2.4	Icons	45
<b>3</b>	<b>Operation</b>	<b>48</b>
<hr/>		
3.1	Instrument Setup	48
3.2	Instrument Setup for Remote Control	51
3.2.1	Remote Control Setup	51
3.2.2	LED Indicators on ZRT80	54
3.3	Autodetect Behaviour	56
3.4	Fixing the Controller to a Holder and Pole	57
3.5	Batteries	62
3.5.1	Operating Principles	62
3.5.2	Instrument	63
3.5.3	Controller	65
3.6	Working with the CompactFlash Card	67
3.6.1	Instrument	68
3.6.2	Controller	70
3.7	Accessing Survey Application Program	74
3.8	Guidelines for Correct Results	77
<b>4</b>	<b>Check &amp; Adjust</b>	<b>80</b>
<hr/>		
4.1	Overview	80
4.2	Preparation	84

4.3	Combined Adjustment (l, t, i, c and Aim360)	86
4.4	Tilting Axis Adjustment (a)	91
4.5	Adjusting the Circular Level of the Instrument and Tribrach	96
4.6	Adjusting the Circular Level of the Prism Pole	98
4.7	Inspecting the Laser Plummet of the Instrument	99
4.8	Servicing the Tripod	102
<b>5</b>	<b>Care and Transport</b>	<b>103</b>
<hr/>		
5.1	Transport	103
5.2	Storage	104
5.3	Cleaning and Drying	105
5.4	Maintenance	107
<b>6</b>	<b>Safety Directions</b>	<b>108</b>
<hr/>		
6.1	General Introduction	108
6.2	Intended Use	109
6.2.1	Instrument	109
6.2.2	Controller	111
6.3	Limits of Use	113
6.4	Responsibilities	114
6.5	Hazards of Use	116



6.6	Laser Classification	122
6.6.1	General	122
6.6.2	Distancer, Measurements with Reflectors	123
6.6.3	Distancer, Measurements without Reflectors	125
6.6.4	Aim360	130
6.6.5	Scout360	132
6.6.6	Navigation Light	134
6.6.7	Laser Plummet	136
6.7	Electromagnetic Compatibility EMC	140
6.8	FCC Statement, Applicable in U.S.	143
<b>7</b>	<b>Technical Data</b>	<b>147</b>
<hr/>		
7.1	Instrument	147
7.1.1	General Technical Data of the Instrument	147
7.1.2	Angle Measurement	154
7.1.3	Distance Measurement with Reflectors	155
7.1.4	Distance Measurement without Reflectors	157
7.1.5	Distance Measurement - Long Range (LO mode)	159
7.1.6	Aim360	161
7.1.7	Scout360	165
7.1.8	Scale Correction	166
7.1.9	Reduction Formulas	172


---

7.2	Controller	176
7.3	Conformity to National Regulations	180
7.3.1	Instrument	180
7.3.2	Controller	181
7.3.3	ZRT80	183
<b>8</b>	<b>International Limited Warranty, Software Licence Agreement</b>	<b>185</b>
<hr/>		
	<b>Index</b>	<b>187</b>
<hr/>		

# 1 Description of the System

## 1.1 System Components

### Main components

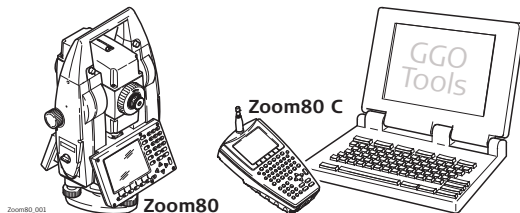

Component	Description
Zoom80	<ul style="list-style-type: none"><li>• an instrument for measuring, calculating and capturing data.</li><li>• comprised of various models with a range of accuracy classes.</li><li>• combined with Zoom80 C to conduct remote control surveys.</li><li>• connected with GGO to view, exchange and manage data.</li></ul>

Component	Description
Zoom80 C	A multi-purpose controller enabling the remote control of Zoom80.
ZRT80	Device used on Zoom80 for radio communication to Zoom80 C Controller.
GGO	An office software consisting of a suite of standard and extended programs for the viewing, exchange and management of data.

## Terminology

The following terms and abbreviations may be found in this manual:

Term	Description
TPS	<b>T</b> otal <b>S</b> tation <b>P</b> ositioning <b>S</b> ystem
RCS	<b>R</b> emote <b>C</b> ontrol <b>S</b> urveying
GGO	<b>G</b> eoMax <b>G</b> eo <b>O</b> ffice


Term	Description
EDM	<p><b>Electronic Distance Measurement</b></p> <p>EDM refers to the laser distancer incorporated into the instrument which enables distance measurement.</p> <p>Three measuring modes are available:</p> <ul style="list-style-type: none"> <li>• <b>IR</b> mode. This mode refers to the ability to measure distances to prisms.</li> <li>• <b>RL</b> mode. This mode refers to the ability to measure distances without prisms.</li> <li>• <b>LO</b> mode. This mode refers to the visible red laser and the ability to measure extended distances to prisms.</li> </ul>
accXess10	accXess10 refers to the Reflectorless EDM technology which enables an increased measuring range with a smaller laser spot size.
NavLight	A Navigation Light fitted to an instrument assists with prism targeting. It consists of two differently coloured flashing lights located in the instrument telescope housing. The person holding the prism can align him/herself into the instrument's line of sight.
Aim360	Aim360 refers to the instrument sensor which enables the automatic fine pointing to a prism.

Term	Description
Automation	Three automation modes are available: <ul style="list-style-type: none"> <li>• None: - no automation and no tracking.</li> <li>• Aim360: automatic fine pointing to a prism.</li> <li>• Track360: automatic tracking of an already targeted prism.</li> </ul>
Scout360	Scout360 refers to the instrument sensor which enables the automatic rapid finding of a prism.
ZRT80	A component of RCS is ZRT80. It is both an integrated radio modem with attached antenna and instrument carry handle.

### Instrument models


Model	Description
Zoom80 S	Reflectorless EDM, Aim360, Track360.
Zoom80 R	Reflectorless EDM, Aim360, Track360, Scout360.

## Controller characteristics

Model	Touch screen	Colour display	Internal radio modem	Internal battery	CompactFlash card	Bluetooth	Windows CE	Use with...
Zoom80 C	✓	✓	✓	✓	✓	✓	✓	Zoom80 instrument
 Use the supplied stylus on the touch screen.								

**Zoom80 C  
available radios**

**Radios for remote control (RCS) are available for the following devices:**

Radio Modem	Description
ZRT80	Instrument carry handle with an integrated radio modem and attached radio antenna.
Zoom80 C	Controller with an integrated radio modem and attached radio antenna. This controller has a colour display.
 All devices contain the same spread spectrum transceiver radio modem.	

**GGO**

The program package GGO is used for the data exchange between the instrument and a computer. It contains several auxiliary programs in order to support the instrument.



For more information about GGO refer to the comprehensive online help.



## 1.2 System Concept

### 1.2.1 Software Concept

#### Description

The instrument and controller use the same software concept.

#### Software type

Software type	Description
System software	<p>This software comprises the central functions of the instrument. It is also referred to as firmware.</p> <p>The programs Survey and Setup are integrated into the firmware and cannot be deleted.</p> <p>The English language is integrated into the firmware and cannot be deleted.</p>
Language software	<p>Numerous languages are available for the instruments. This software is also referred to as system language.</p> <p>The system software enables a maximum of three languages which can be stored at any one time - the English language and two other languages. The English language is the default language and cannot be deleted. One language is chosen as the active language.</p>

Software type	Description
Application programs	<p>A suite of optional survey-specific application programs is available for the instrument.</p> <p>Some of the programs are activated freely and require no license key and others require purchasing and are only activated with a license key.</p>

### Software upload

All instrument software is stored in the System RAM of the instrument. The software can be uploaded onto the instrument using the following methods:

- Using GGO the software is transferred via the serial interface to the CompactFlash card in the instrument, which is then stored to the System RAM.
- By connecting the CompactFlash card directly to the computer either via an internal card slot housing or an external drive, the software is transferred to the card, which is then stored to the System RAM.



Uploading firmware can take some time. Ensure that the battery is at least 75% full before beginning the upload, and do not remove the battery during the upload process.

## 1.2.2 Power Concept

---

### General

Use the GeoMax batteries, chargers and accessories or accessories recommended by GeoMax to ensure the correct functionality of the instrument.

---

### Power options

Type	Power supply
Instrument	One ZBA400 battery fitting into the instrument, OR 11.5 V to 13.5 V power supply via cable.
Controller	One ZBA200 battery fitting into the controller, OR 11.5 V to 28 V power supply via cable.

---

### 1.2.3 Data Storage and Data Conversion Concept

#### Description

Data is stored within a job in a database on a CompactFlash card.

#### Memory device

CompactFlash card: A CompactFlash card housing is standard. A CompactFlash card can be inserted and removed.

Available capacity: 256 MB.



Whilst other CompactFlash cards may be used, GeoMax recommends GeoMax CompactFlash cards and cannot be held responsible for data loss or any other error that may occur when using a non-GeoMax card.



Unplugging connecting cables or removing the CompactFlash card during the measurement may cause loss of data. Always return to the **Main Menu** before removing the CompactFlash card and switch off the instrument before removing cables.

## Data conversion

### Export

Job data can be exported from a job in a variety of file types. A format can be defined in GGO Format Manager. Refer to the online help of GGO Format Manger for information on creating format files.

### Import

Data can be imported from ASCII, DXF, GSI8 or GSI16 format.

---

## Transfer raw data to GGO

Raw data can be transferred between the database on the CompactFlash card and GGO in two ways:

- From the CompactFlash card directly via a serial interface to a project in GGO on a PC.
  - From the CompactFlash card using for example an OMNI drive to a project in GGO on a PC.
- 




CompactFlash cards can directly be used in an external drive. Some PC card drives can require an adaptor.

---

## 1.3 Container Contents

### Container for instrument and accessories

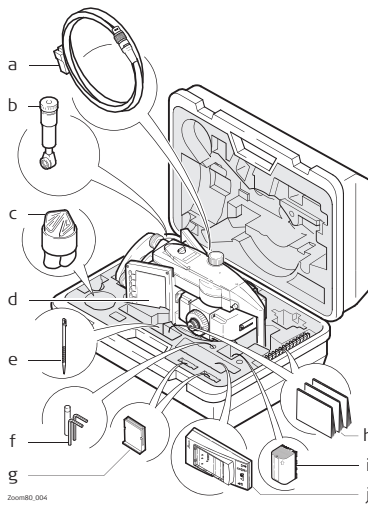


Zoom80\_004

- a) Data transfer cable
- b) ZDE100 diagonal eyepiece
- c) Protective cover for instrument
- d) Instrument with tribrach and ZRT80
- e) Spare stylus
- f) Allen key
- g) CompactFlash cards and covers
- h) ZCH201 battery charger
- i) ZBA400 Battery
- j) User manuals


## 1.4 Components

### 1.4.1 Instrument

Instrument components  
part 1 of 2

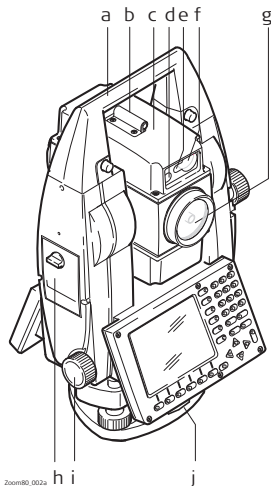


- a) Carry handle
- b) Optical sight
- c) Telescope, integrating EDM, Aim360
- d) NavLight flashing diode - yellow and red
- e) Scout360, transmitter
- f) Scout360, receiver
- g) Coaxial optics for angle and distance measurement, and exit port of visible laser beam for distance measurements
- h) CompactFlash card compartment
- i) Horizontal drive
- j) Tribrach securing screw

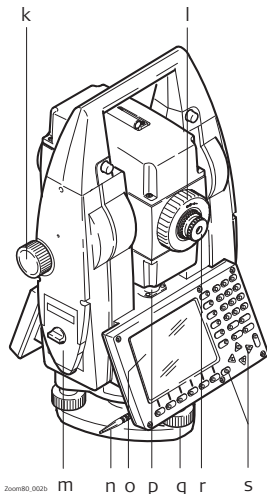**Instrument  
components  
part 2 of 2**


- k) Vertical drive
- l) Focusing ring
- m) Battery compartment
- n) Stylus for touch screen
- o) Screen
- p) Circular level
- q) Tribrach footscrew
- r) Interchangeable eyepiece
- s) Keyboard




## Instrument components for RCS

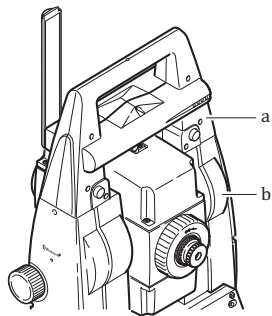

- a) ZRT80
  - b) Bluetooth port
-


## 1.4.2 Controller

Upside of  
controller

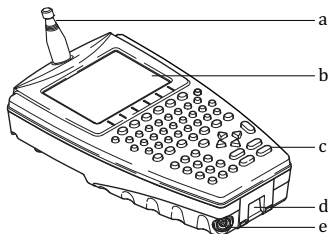

- a) Radio antenna
- b) Screen
- c) Keyboard
- d) Bottom clips
- e) LEMO port

## Underside of controller

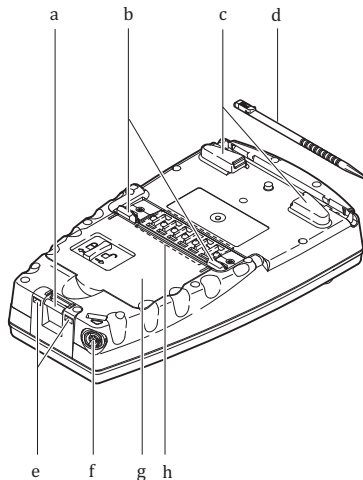


- a) Bottom spring clip for pole holder
- b) Top clips for pole holder
- c) Top clips
- d) Stylus
- e) Bottom clips
- f) LEMO port
- g) Battery compartment with Compact Flash card compartment
- h) Bluetooth ports (included inside the controller)

## 2 User Interface

### 2.1 Keyboard

#### 2.1.1 Instrument

#### Keyboard

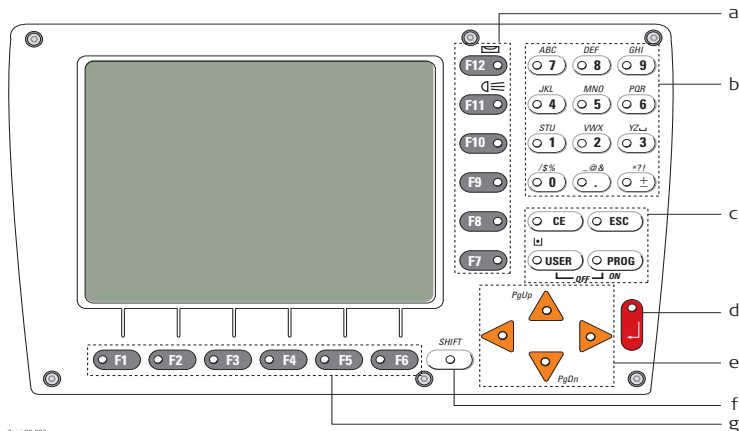



- a) Hot keys **F7-F12**
- b) Alphanumeric keys
- c) CE, ESC, USER, PROG
- d) **ENTER**
- e) Arrow keys
- f) **SHIFT**
- g) Function keys **F1-F6**

## Keys

Key	Description
Hot keys <b>F7-F12</b>	<ul style="list-style-type: none"> <li>• User definable keys to execute commands or access chosen screens.</li> </ul>
Alphanumeric keys	<ul style="list-style-type: none"> <li>• To type letters and numbers.</li> </ul>
<b>CE</b>	<ul style="list-style-type: none"> <li>• Clears all entry at the beginning of user input.</li> <li>• Clears the last character during user input.</li> </ul>
<b>ESC</b>	<ul style="list-style-type: none"> <li>• Leaves the current menu or dialog without storing changes made.</li> </ul>
<b>USER</b>	<ul style="list-style-type: none"> <li>• Calls the user-defined menu.</li> </ul>
<b>PROG (ON)</b>	<ul style="list-style-type: none"> <li>• If the instrument is off: to turn instrument on.</li> <li>• If the instrument is on: press at any time to select an application program.</li> </ul>

Key	Description
<b>ENTER</b>	<ul style="list-style-type: none"> <li>• Selects the highlighted line and leads to the next logical dialog/menu.</li> <li>• Starts the edit mode for edit fields.</li> <li>• Opens a list box.</li> </ul>
<b>SHIFT</b>	<ul style="list-style-type: none"> <li>• Changes between the first and the second level of function keys.</li> </ul>
<b>Arrow</b> keys	<ul style="list-style-type: none"> <li>• Move the focus on the screen.</li> </ul>
Function keys <b>F1-F6</b>	<ul style="list-style-type: none"> <li>• Correspond to the six softkeys that appear on the bottom of the screen when the screen is activated.</li> </ul>


## Key combinations

Keys	Description
<b>PROG</b> plus <b>USER</b>	Turns instrument off.
<b>SHIFT F12</b>	Calls <b>STATUS Level &amp; Laser Plummet</b> .
<b>SHIFT (F11)</b>	Calls <b>CONFIGURE Lights, Display, Beeps, Text, Lights</b> page.
<b>SHIFT USER</b>	Calls <b>QUICK SET Change Settings to:</b> .
<b>SHIFT</b> 	Pages up.
<b>SHIFT</b> 	Pages down.

---

## 2.1.2 Controller

### Keyboard

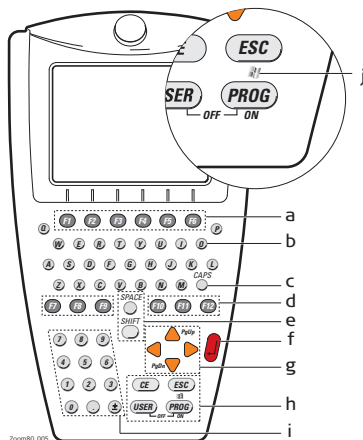

- a) Function keys **F1-F6**
- b) Alpha keys
- c) **CAPS**
- d) Hot keys **F7-F12**
- e) **SPACE, SHIFT**
- f) **ENTER**
- g) Arrow keys
- h) **CE, ESC, USER, PROG**
- i) Numeric keys
- j) Windows key symbol. It is the Microsoft flag logo located between **PROG** and **ESC**.




## Keys

Key	Description
Function keys <b>F1-F6</b>	<ul style="list-style-type: none"><li>Correspond to the six softkeys that appear on the bottom of the screen when the screen is activated.</li></ul>
Hot keys <b>F7-F12</b>	<ul style="list-style-type: none"><li>User definable keys to execute commands or access chosen screens.</li></ul>
Alpha keys	<ul style="list-style-type: none"><li>To type letters.</li></ul>
Numeric keys	<ul style="list-style-type: none"><li>To type numbers.</li></ul>
<b>CAPS</b>	<ul style="list-style-type: none"><li>Switches between upper case and lower case letters.</li></ul>
<b>CE</b>	<ul style="list-style-type: none"><li>Clears all entry at the beginning of user input.</li><li>Clears the last character during user input.</li></ul>
<b>ESC</b>	<ul style="list-style-type: none"><li>Leaves the current menu or dialog without storing changes made.</li><li>In the Main Menu: Turns controller off when held for 2 s.</li></ul>
<b>PROG (ON)</b>	<ul style="list-style-type: none"><li>If the controller is off: to turn controller on.</li><li>If the controller is on: Accesses the Programs menu.</li></ul>
<b>SHIFT</b>	<ul style="list-style-type: none"><li>Changes between the first and the second level of function keys.</li></ul>


Key	Description
<b>SPACE</b>	<ul style="list-style-type: none"> <li>Enters a blank.</li> </ul>
<b>USER</b>	<ul style="list-style-type: none"> <li>Calls the user-defined menu.</li> </ul>
<b>Arrow</b> keys	<ul style="list-style-type: none"> <li>Move the focus on the screen.</li> </ul>
<b>ENTER</b>	<ul style="list-style-type: none"> <li>Selects the highlighted line and leads to the next logical dialog/menu.</li> <li>Starts the edit mode for edit fields.</li> <li>Opens a choicelist.</li> </ul>

### Key combinations

Key	Function
<b>PROG</b> plus <b>USER</b>	Turns controller off when pressed simultaneously.
<b>SHIFT</b> ▲	Pages up.
<b>SHIFT</b> ▼	Pages down.
<b>SHIFT</b> <b>PROG</b> (  )	Displays the Windows desktop, task bar and start menu.
<b>USER STAT (F3)</b>	Opens the Status Menu.


## 2.2 Screen

### Screen

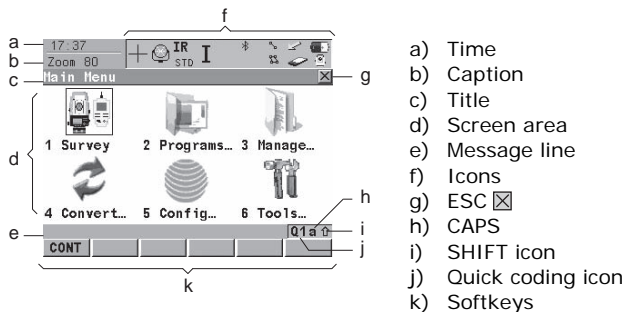

### Elements of the screen

Element	Description
Time	The current local time is shown.
Caption	Shows location either in <b>Main Menu</b> , under <b>PROG</b> key or <b>USER</b> key.
Title	Name of the screen is shown.


Element	Description
Screen area	The working area of the screen.
Message line	Messages are shown for 10 s.
Icons	Shows current status information of the instrument. Refer to "2.4 Icons". Can be used with touch screen.
<b>ESC</b> 	Can be used with touch screen. Same functionality as the fixed key <b>ESC</b> . The last operation will be undone.
<b>CAPS</b>	The caps mode for upper case letters is active. The caps mode is activated and deactivated by pressing <b>UPPER(F5)</b> or <b>LOWER(F5)</b> in some screens.
<b>SHIFT</b> icon	Shows the status of the <b>SHIFT</b> key; either first or second level of softkeys is selected. Can be used with touch screen and has the same functionality as the fixed key <b>SHIFT</b> .
Quick coding icon	Shows the quick coding configuration. Can be used with touch screen to turn quick coding on and off.
Softkeys	Commands can be executed using <b>(F1)-(F6)</b> keys. The commands assigned to the softkeys are screen-dependent. Can be used directly with touch screen.
Scroll bar	Scrolls the screen area up and down.

## 2.3 Operating Principles

### Keyboard and touch screen

The user interface is operated either by the keyboard or by the touch screen with supplied stylus. The workflow is the same for keyboard and touch screen entry, the only difference lies in the way information is selected and entered.

### Selecting from a menu

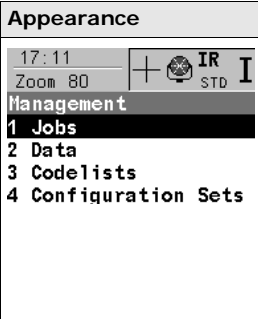Appearance	Description
	<p>To select an item from a menu, do one of the following:</p> <ul style="list-style-type: none"><li>Move the focus to the item. <b>ENTER</b> or <b>CONT (F1)</b>.</li><li>OR</li><li>Type the complete selection number in front of the item. <b>ENTER</b> or <b>CONT (F1)</b> are not required.</li><li>OR</li><li>Tap on the item with the stylus.</li></ul>


Edit an entire value in input fields

Appearance	Description
	<ol style="list-style-type: none"> <li>1) Highlight the field.</li> <li>2) Type numeric and/or alphanumeric characters to overwrite.</li> <li>3) <b>ENTER</b> or tap outside of the field.</li> </ol>

Selecting a page

Appearance	Description
	<p>To select a page in a screen, do one of the following:</p> <p><b>PAGE (F6).</b></p> <p>OR</p> <p>Tap on the page tab with the stylus.</p>

## Edit an individual character in input fields

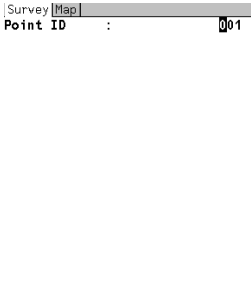Appearance	Description
 <p>The screenshot shows a software interface with a header bar containing 'Survey   Map'. Below the header, there is a label 'Point ID' followed by a colon and an input field containing the text '001'.</p>	<p>A character can be inserted or overwritten. The procedure is the same for both cases.</p> <ol style="list-style-type: none"><li>1) Highlight the field.</li><li>1) For the keyboard: <b>ENTER</b>. The edit mode is activated where additional functions like insert and overwrite are available.</li><li>1) For the touch screen: Highlight the characters to be changed.</li><li>1) Type numeric and/or alphanumeric characters.</li><li>1) <b>ENTER</b> or tap outside of the field.</li></ol>

Access special alphanumeric characters for input




Step	Description
1.	Highlight the input field.
2.	For the keyboard: <b>ENTER</b> .
3.	Toggle to the desired special character set by using the up/down arrow keys.
4.	Press the function key assigned to the required character group.
5.	Press the function key with the required character.
6.	Repeat step 4. and 5. for entering more special characters of the same character set.
7.	<b>ENTER</b> .



## Appearance and selection from a choicelist



Choicelists have various appearances.

### Closed choicelist



Appearance	Description	Selection
	Triangles on the right indicate further available choices.	Use the arrow keys   to change through the list or tap the triangles on the screen.

**ENTER** or tap on the field to access the choicelist. Opening a choicelist reveals either a simple listbox or a comprehensive listbox dialog.
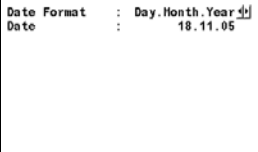
### Simple listbox

Appearance	Description	Selection
	<ul style="list-style-type: none"><li>• Choicelist shows items to select.</li><li>• A search field is shown if necessary.</li><li>• A scroll bar is shown if necessary.</li></ul>	<ul style="list-style-type: none"><li>• Highlight the item and <b>ENTER</b>.</li><li>• To exit without changes <b>ESC</b>, tap  or outside the simple listbox.</li></ul>

## Listbox dialog

Appearance	Description	Selection
	<ul style="list-style-type: none"> <li>• Choicelist fills the whole screen.</li> <li>• A search field is shown.</li> <li>• A scroll bar is shown if necessary.</li> <li>• The functionality comprises adding, editing and deleting of items.</li> <li>• Listbox dialogs are explained in detail at appropriate places in the manuals.</li> </ul>	<ul style="list-style-type: none"> <li>• Highlight the item and <b>CONT (F1)</b>.</li> <li>• To exit without changes press <b>ESC</b> or tap .</li> </ul>

## 2.3.1 Instrument


---

Turn instrument on

Press and hold **PROG** for 2 s.

---

Turn instrument off step-by-step

Step	Description
	The instrument can only be turned off in the <b>Main Menu</b> .
1.	Press and hold both <b>USER</b> and <b>PROG</b> simultaneously. OR Press <b>ESC</b> for more than 2 s.
2.	Press <b>YES (F6)</b> to continue or <b>NO (F4)</b> to cancel.

---

Lock/Unlock keyboard

Option	Description
Lock	To lock the keyboard press and hold <b>SHIFT</b> for 3 s. The message 'Keyboard locked' is momentarily displayed on the Message Line.
Unlock	To unlock the keyboard press and hold <b>SHIFT</b> for 3 s. The message 'Keyboard unlocked' is momentarily displayed on the Message Line.

---

## 2.3.2 Controller

---

**Turn controller on** Press **PROG** (ON) on the keyboard.

---

**Turn controller off**

Option	Description
Turn controller off	The controller can only be turned off in the Main Menu screen or in the Windows CE desktop. Press and hold both <b>USER</b> and <b>PROG</b> simultaneously. OR Press and hold <b>ESC</b> for 2 s.
Auto power down	Option to set shutdown and sleep events after user defined duration of instrument inactivity.


---

## 2.4 Icons

### Description

The screen icons display the status information of the instrument.

### Position of the icons on the screen

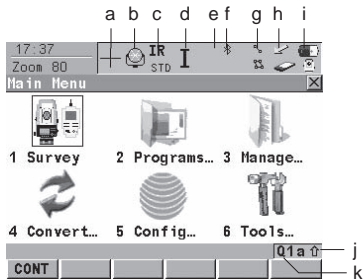

- a) Aim360/Track360/Scout360
- b) Reflector
- c) EDM
- d) Compensator/face I&II
- e) Remote control, available on Zoom80 C
- f) Bluetooth
- g) Line/area
- h) CompactFlash card
- i) Battery
- j) **SHIFT**
- k) Quick coding

### Icons

Icon	Description
<b>Aim360/Track360/Scout360</b>	The currently active Aim360/Track360/Scout360 settings or searches are displayed.
<b>Reflector</b>	The currently active reflector is displayed.

Icon	Description
<b>EDM</b>	The currently active EDM measurement settings are displayed.
<b>Compensator/face I&amp;I</b>	Compensator off, out of range or face I&I icon is displayed.
<b>Remote control</b>	Remote control is turned on.
<b>Bluetooth</b>	The status of each Bluetooth port and any Bluetooth connection is displayed.
<b>Line/area</b>	The number of lines and areas currently open in the active job is displayed.
<b>CompactFlash card</b>	The status of the CompactFlash card is displayed. <ul style="list-style-type: none"> <li>• For the CompactFlash card, the capacity of used space is shown in seven levels.</li> </ul>
<b>Battery</b>	The status and source of the battery is displayed. The percentage of remaining power capacity for all batteries is displayed numerically and graphically. For internal and external battery being attached at the same time the internal battery is used until it is empty and then the external battery is used.
<b>SHIFT</b>	The status of the <b>SHIFT</b> key is displayed.

Icon	Description
<b>Quick coding</b>	Shows the quick coding configuration. Can be used with touch screen to turn quick coding on and off.

---

## 3 Operation

### 3.1 Instrument Setup

---

#### Description

This topic describes an instrument setup over a marked ground point using the laser plummet. It is always possible to set up the instrument without the need for a marked ground point.

---




#### Important features


- It is always recommended to shield the instrument from direct sunlight and avoid uneven temperatures around the instrument.
  - The laser plummet described in this topic is built into the vertical axis of the instrument. It projects a red spot onto the ground, making it appreciably easier to centre the instrument.
  - The laser plummet cannot be used with a tribrach equipped with an optical plummet.
-



## Setup step-by-step

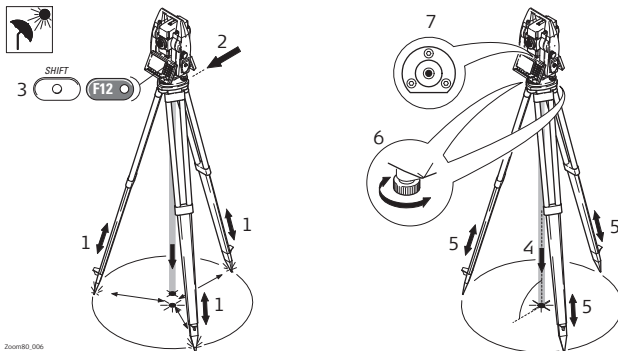

Zoom80\_006


Step	Description
	Shield the instrument from direct sunlight and avoid uneven temperatures around the instrument.
1.	Extend the tripod legs to allow for a comfortable working posture. Position the tripod over the marked ground point, centring it as well as possible.
2.	Fasten the tribrach and instrument onto the tripod.


Step	Description
3.	Turn on the instrument by pressing <b>PROG</b> for 2 s. Press <b>SHIFT</b> (F12) to access <b>STATUS Level &amp; Laser Plummet</b> , activating the laser plummet.
4.	Move the tripod legs (1) and use the tribrach footscrews (6) to centre the plummet (4) over the ground point.
5.	Adjust the tripod legs to level the circular level (7).
6.	By using the electronic level turn the tribrach footscrews (6) to precisely level the instrument.
7.	Centre the instrument precisely over the ground point (4) by shifting the tribrach on the tripod plate (2).
8.	Repeat steps 6. and 7. until the required accuracy is achieved.

## 3.2 Instrument Setup for Remote Control


### 3.2.1 Remote Control Setup

Attaching the ZRT80 to the instrument

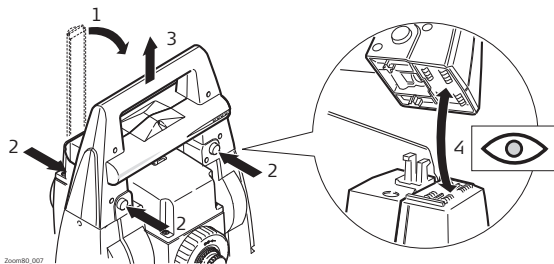


Step	Description
	Refer to "3.1 Instrument Setup" for the initial instrument setup onto a tripod. Remove the instrument carry handle by simultaneously pressing and holding-in the four push buttons.
1.	Place the ZRT80 onto the instrument by simultaneously pressing and holding-in the four push buttons.

---

Step	Description
	Ensure that the interface connection on the underside of the ZRT80 is on the same side as the Bluetooth port.
2.	Swing the ZRT80 antenna into an upright position.

---

## Instrument setup for Remote Control

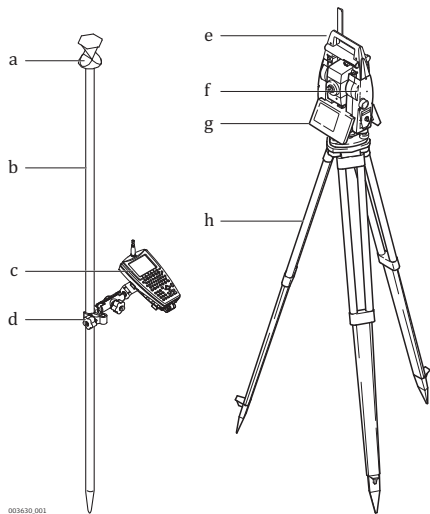

003630.001

- a) 360° prism
- b) Prism pole
- c) Zoom80 C controller
- d) ZHR102 holder
- e) ZRT80
- f) Bluetooth port
- g) Zoom80 instrument
- h) Tripod


### 3.2.2 LED Indicators on ZRT80

#### LED Indicators

##### Description

The ZRT80 has **L**ight **E**mitting **D**iode indicators. They indicate the basic ZRT80 status.

##### Diagram of the LED Indicators

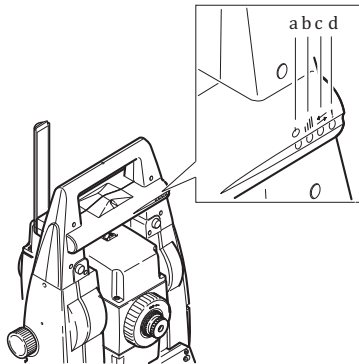

- a) Power LED
- b) Link LED
- c) Data Transfer LED
- d) Mode LED

## Description of the LED Indicators

IF the	is	THEN
Power LED	off	power is off.
	green	power is on.
Link LED	off	no radio link to remote controller.
	red	radio link to remote controller.
Data Transfer LED	off	no data transfer to/from remote controller.
	green or green flashing	data transfer to/from remote controller.
Mode LED	off	data mode.
	red	configuration mode.

---

---

### 3.3 Autodetect Behaviour

---

**Description**

- The instrument incorporates an autodetect behaviour and automatically detects the following device:
    - ZRT80
  - Whenever a device is attached, the instrument responds with two short beeps.
  - Whenever a device is removed, the instrument responds with one long beep.
- 


**ZRT80**

- ZRT80 is automatically detected by the instrument when it is attached and the port configured.
-



### 3.4 Fixing the Controller to a Holder and Pole

Components of  
the ZHR102  
holder

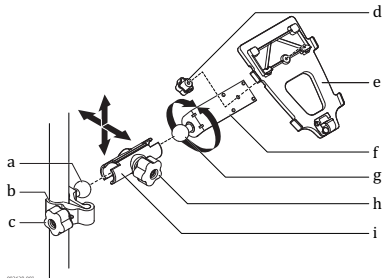




#### Clamp


- a) Ball joint
- b) Clamp
- c) Tightening screw


#### Holder

- d) Fixation screw
- e) Mounting plate
- f) Mounting arm
- g) Ball joint
- h) Tightening screw
- i) Double joint clamp

### Attaching the controller to the holder step-by-step

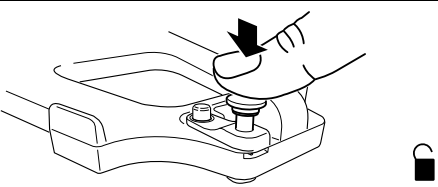
Step	Description
1.	Remove holder from the travel container.
2.	Insert the pole into the clamp hole.
3.	Tighten the clamp with the tightening screw.
4.	Adjust the angle and height of the mounting plate and holder on the pole to comfort.
5.	Tighten holder with the tightening screw.
	Once tightened, the tightening screw can be slightly loosened to change the position of the handle for more comfort.
	A locking mechanism is incorporated in the mounting plate of the holder.
6.	Before the controller is placed onto the mounting plate ensure that the locking pin is put into the unlocked position. To unlock the locking pin, push down the red button situated on top of the mounting plate.
	

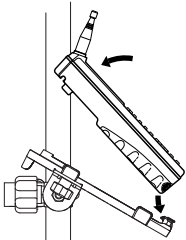Step	Description
7.	Hold the controller above the holder and lower the end into the holder.
8.	<p data-bbox="474 218 1103 342">Apply slight pressure in a downward direction and then lower the top part of controller until the unit is clicked into the holder. The guides of the holder aid in this action.</p>  <p data-bbox="1125 543 1176 554">003459_001</p>

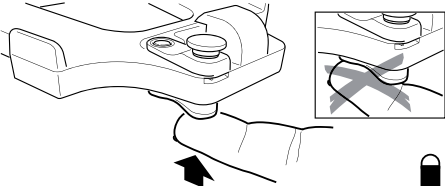Step	Description
9.	<p>After the controller is placed onto the mounting plate ensure that the locking pin is put into the locked position. To lock the locking pin, push up the red button from below.</p> 

## Detaching the controller from the holder step-by-step

Step	Description
1.	Unlock the locking pin by pushing down the red button situated on top of the mounting plate.
2.	Place the palm over the top of the controller until the fingers grip the bar of the holder under the controller.
3.	Push the top of the controller toward the bar of the holder.
4.	While in this position, raise the top of the controller from the holder.

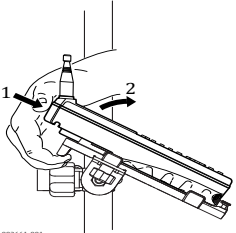

003661\_001

## 3.5 Batteries

### 3.5.1 Operating Principles

#### Charging / first-time use


- 
- The battery must be charged prior to using it for the first time because it is delivered with an energy content as low as possible.
  - The permissible temperature range for charging is between 0°C to +40°C/+32°F to +104°F. For optimal charging we recommend charging the batteries at a low ambient temperature of +10°C to +20°C/+50°F to +68°F if possible.
  - It is normal for the battery to become warm during charging. Using the chargers recommended by GeoMax, it is not possible to charge the battery if the temperature is too high.
  - For new batteries or batteries that have been stored for a long time (> three months), it is effectual to make only one charge/discharge cycle.
  - For Li-Ion batteries, a single discharging and charging cycle is sufficient. We recommend carrying out the process when the battery capacity indicated on the charger or on a GeoMax product deviates significantly from the actual battery capacity available.

#### Operation / Discharging

- 
- The batteries can be operated from -20°C to +55°C/-4°F to +131°F.
  - Low operating temperatures reduce the capacity that can be drawn; high operating temperatures reduce the service life of the battery.
-

## 3.5.2 Instrument

Insert and  
remove battery  
step-by-step

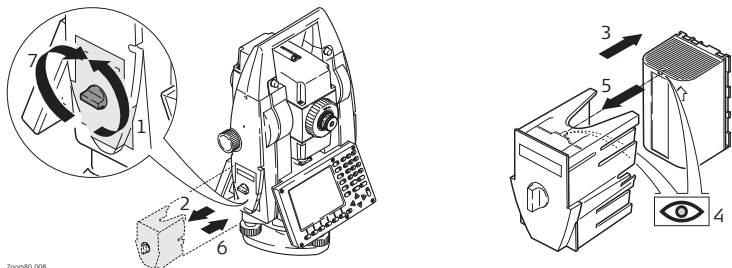

Step	Description
1.	Face the instrument so that the vertical drive screw is on the left. The battery compartment is now on the left side of the instrument. Turn the knob to the vertical position, opening the lid of the battery compartment.
2.	Pull out the battery housing.
3.	Pull the battery from the battery housing.

---


Step	Description
4.	A pictogram of the battery is displayed inside the battery housing. This is a visual aid to assist in placing the battery correctly.
5.	Place the battery into the battery housing, ensuring that the contacts are facing outward. Click the battery into position.
6.	Place the battery housing into the battery compartment. Push the battery housing in until it fits completely into the battery compartment.
7.	Turn the knob to lock the battery compartment. Ensure that the knob is returned to its original horizontal position.

---



### 3.5.3 Controller

Insert and  
remove battery  
step-by-step

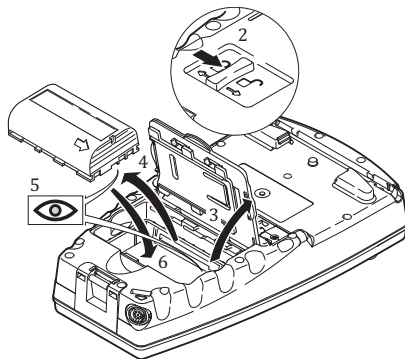

Step	Description
1.	Turn the controller over to gain access to the battery compartment.
2.	Push the slide fastener in the direction of the arrow with the open-lock symbol.
3.	Open the battery compartment.

Step	Description
4.	Pull the battery from the battery compartment.
5.	A pictogram of the battery is displayed inside the battery compartment. This is a visual aid to assist in placing the battery correctly.
6.	Place the battery into the battery compartment with the GeoMax logo facing to the left.
7.	Close the battery compartment by pushing the slide fastener in the direction of the arrow with the close-lock symbol.

## 3.6 Working with the CompactFlash Card

---



- Keep the card dry.
  - Use it only within the specified temperature range.
  - Do not bend the card.
  - Protect the card from direct impacts.
- 





Failure to follow these instructions could result in data loss and/or permanent damage to the card.

---

### 3.6.1 Instrument

Insert and remove a CompactFlash card step-by-step

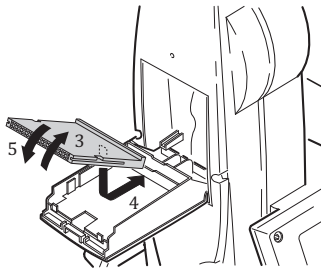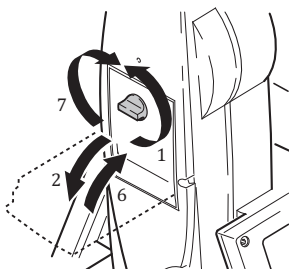



Step	Description
1.	Face the instrument so that the vertical drive screw is on the left. The CompactFlash card compartment is now on the right side of the instrument. Turn the knob to the vertical position, opening the lid of the CompactFlash card compartment.
2.	Open the lid of the CompactFlash card compartment.
3.	Pull the front of the CompactFlash card up and take the card out of the lid.



Step	Description
4.	Place the lower end of the CompactFlash card at the lower end of the CompactFlash card compartment. The extended edge of the card has to be on the upper side as shown on the pictogram in the CompactFlash card compartment.
5.	Press the card down on the lid.
6.	Close the lid.
7.	Turn the knob to lock the CompactFlash card compartment. The lid is closed correctly when the knob is turned to a horizontal position.

### 3.6.2 Controller

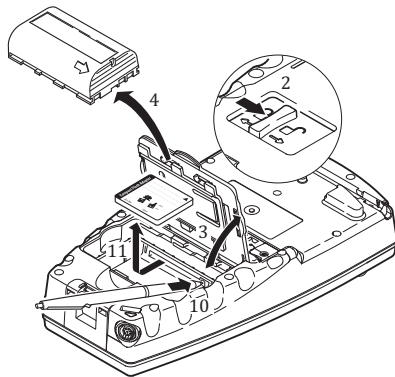Insert and remove a CompactFlash card step-by-step





Step	Description
	The CompactFlash card is inserted into a slot inside the battery compartment.
1.	Turn the controller over to gain access to the battery compartment.


Step	Description
2.	Push the slide fastener in the direction of the arrow with the open-lock symbol.
3.	Open the battery compartment.
4.	Pull the battery from the battery compartment.
5.	 The card should be held with the label for the care instructions upwards and the contacts facing the slot. Slide the card firmly into the slot until it clicks into position.   Do not force the card into the slot.
6.	Place the battery into the battery compartment.
7.	Close the compartment cover.
8.	To remove the card, open the cover of the battery compartment.
9.	Pull the battery from the battery compartment.
10.	Press the eject button on the right side of the card slot twice.
11.	Pull out the CompactFlash card.
12.	Close the compartment cover.

## Format a CompactFlash card step-by-step

Formatting the CompactFlash card before starting to store data is required if a completely new CompactFlash card is used or if all existing data needs to be deleted.

Step	Description
1.	<b>Main Menu: Tools...\Format Memory Device.</b>
2.	<b>TOOLS Format Memory Device</b> <Memory Device: CF Card> <Format Method: Format Quick> Select the memory device to be formatted.
	By activating the format command all data will be lost. Make sure that all important data on the CompactFlash card has been backed up before formatting the card. Before formatting the internal memory make sure that all important data is first transferred to the PC.
	To exit the screen without formatting the memory device, press ESC. This returns to the previous screen without execution of any command.
3.	<b>CONT (F1).</b>
4.	<b>YES (F4)</b> to complete the formatting of the CompactFlash card.



Step	Description
	<b>NO (F6)</b> to abort the formatting of the CompactFlash card and return to <b>TOOLS Format Memory Device</b> .
5.	Once the formatting of the CompactFlash card is completed the system returns to the <b>Main Menu</b> .

---

### 3.7 Accessing Survey Application Program

#### Access

Select **Main Menu: Survey.**

OR

Press **PROG.** Highlight **Survey.** **CONT (F1).**

#### SURVEY

#### Survey Begin

17:11		+		IR		I		*		☰		☰		☰		☰	
SURVEY		+ ⊗		STD													
Survey Begin																	
Job	:	active job															
Code list	:	<None>															
Config Set	:	survey															
Reflector	:	Circular prism															
Add. Constant:	:	0.0 mm															
																	Q1a ↑
CONT	CONF	SETUP															

#### CONT (F1)

To accept changes and access the subsequent screen. The chosen settings become active.

#### CONF (F2)

To access **SURVEY Configuration.**

#### SETUP (F3)

Opens **SETUP Station Setup** to set station and orientation.

## Description of fields

Field	Option	Description
<Job:>	Choicelist	The active job. All jobs from <b>Main Menu: Manage...Jobs</b> can be selected.
<Codelist:>	Choicelist	No codes are stored in the selected <Job:>. All codelists from <b>Main Menu: Manage...Codelists</b> can be selected.
	Output	Codes have already been stored in the selected <Job:>. If codes had been copied from a System RAM codelist, then the name of the codelist is displayed. If codes have not been copied from a System RAM codelist but typed in manually, then the name of the active job is displayed.

Field	Option	Description
<Config Set:>	Choicelist	<p>The active configuration set. All configuration sets from <b>Main Menu: Manage...\Configuration Sets</b> can be selected.</p> <p>The instrument has numerous user configuration parameters and functions. This allows a variety of preferences to be addressed. The configuration of the parameters and functions for an individual measuring technique are combined in a configuration set.</p>
<Reflector:>	Choicelist	<p>Displays the active reflector. All reflectors from <b>Main Menu: Manage...\Reflectors</b>. All listed reflectors can be selected.</p>
<Add. Constant:>	Output	<p>Displays the additive constant stored with the chosen reflector.</p>

### Next step

**CONT (F1)** to access **SURVEY Survey: Job Name**, where measurements can be performed with **ALL (F1)** or **DIST (F2)** and/or **REC (F3)**.


---

## 3.8 Guidelines for Correct Results



Very short distances may be measured reflectorless in IR mode to well reflecting targets. Note that the distances are corrected with the additive constant defined for the active reflector.

### Distance measurement

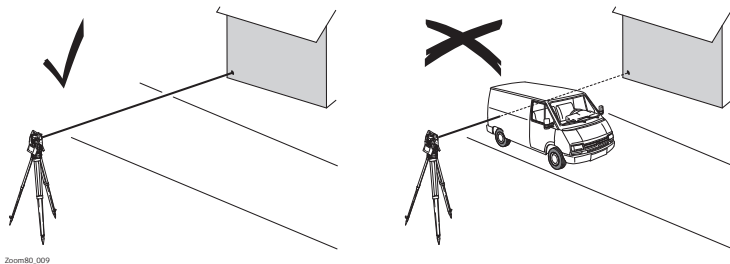

Zoom80\_009

When measurements are being made using the red laser EDM, the results can be influenced by objects passing between the EDM and the intended target surface. This occurs because reflectorless measurements are made to the first surface returning sufficient energy to allow the measurement to take place. For example, if the intended target surface is the surface of a building, but a vehicle passes between the EDM and the target surface as the measurement

is triggered, the measurement may be made to the side of the vehicle. The result is the distance to the vehicle, not to the surface of the building. If using the long range measurement mode (> 1000 m, > 3300 ft) to prisms, and an object passes within 30 m of the EDM as the measurement is triggered, the distance measurement may be similarly effected due to the strength of the laser signal.

 **CAUTION**

---

Due to laser safety regulations and measuring accuracy, using the Long Range Reflectorless EDM is only allowed to prisms that are more than 1000 m (3300 ft) away.



---

Accurate measurements to prisms should be made in IR mode.



---

When a distance measurement is triggered, the EDM measures to the object which is in the beam path at that moment. If a temporary obstruction, for example a passing vehicle, heavy rain, fog or snow is between the instrument and the point to be measured, the EDM may measure to the obstruction.



---

Do not measure with two instruments to the same target simultaneously to avoid getting mixed return signals.

---

## Aim360/ Track360

The Aim360 sensor permits automatic angle and distance measurements to prisms. The prism is sighted with the optical sight. After initiating a distance measurement, the instrument sights the prism centre automatically. Vertical and horizontal angles and the distance are measured to the centre of the prism. The Track360 mode enables the instrument to follow a moving prism.

---



As with all other instrument errors, the collimation error of the automatic aiming must be redetermined periodically. Refer to "4 Check & Adjust" about checking and adjusting instruments.

---



When a measurement is triggered while the prism is still moving, distance and angle measurements may not be made for the same position and coordinates may vary.

---



If the prism location is changed too quickly, the target may be lost. Make sure that the speed does not exceed the figure given in the technical data.

---

## 4 Check & Adjust

### 4.1 Overview

#### Description

GeoMax instruments are manufactured, assembled and adjusted to a high quality. Quick temperature changes, shock or stress can cause deviations and decrease the instrument accuracy. It is therefore recommended to calibrate the instrument from time to time. This can be done in the field by running through specific measurement procedures. The procedures are guided and have to be followed carefully and precisely as described in the following chapters. Some other instrument errors and mechanical parts can be adjusted mechanically.

#### Electronic adjustment

The following instrument errors can be checked and adjusted electronically:

l, t	Compensator longitudinal and transversal index errors
i	Vertical index error, related to the standing axis
c	Horizontal collimation error, also called line of sight error
a	Tilting axis error
Aim360	Aim360 zero point error for Hz and V - option

Every angle measured in the daily work is corrected automatically if the compensator and the Hz-corrections are activated in the instrument configuration. Select **Main Menu: Config...\Instrument Settings...\Compensator** to check the settings.



## View current adjustment errors

The currently used adjustment errors can be viewed under **Main Menu: Tools... \Check & Adjust... \Current Values.**

---

## Mechanical adjustment

The following instrument parts can be adjusted mechanically:

- Circular level on instrument and tribrach
  - Laser plummet
  - Optical plummet - option on tribrach
  - Allen screws on tripod
- 

## Precise measurements

To get precise measurements in the daily work, it is important:

- To check and adjust the instrument from time to time.
  - To take high precision measurements during the check and adjust procedures.
  - To measure targets in two faces. Some of the instrument errors are eliminated by averaging the angles from both faces.
  - Refer to "4.2 Preparation" to find more important points.
-



During the manufacturing process, the instrument errors are carefully determined and set to zero. As mentioned above, these errors can change and it is highly recommended to redetermine them in the following situations:

- Before the first use
  - Before every high precision survey
  - After rough or long transportation
  - After long working periods
  - After long storage periods
  - If the temperature difference between current environment and the temperature at the last calibration is more than 20°C
-

**Summary of errors to be adjusted electronically**

<b>Instrument error</b>	<b>Effects Hz</b>	<b>Effects V</b>	<b>Elimination with two face measurement</b>	<b>Automatically corrected with proper adjustment</b>
c - Line of sight error	✓	---	✓	✓
a - Tilting axis error	✓	---	✓	✓
l - Compensator index error	---	✓	✓	✓
t - Compensator index error	✓	---	✓	✓
i - Vertical index error	---	✓	✓	✓
Aim360 Collimation error	✓	✓	---	✓

## 4.2 Preparation

---



Before determining the instrument errors, the instrument has to be levelled using the electronic level. **SHIFT (F12)** to access **STATUS Level & Laser Plummet, Level** page.

The tribrach, the tripod and the underground should be stable and secure from vibrations or other disturbances.

---



The instrument should be protected from direct sunlight to avoid thermal warming.

It is also recommended to avoid strong heat shimmer and air turbulence. The best conditions are early in the morning or with overcast sky.

---



Before starting to work, the instrument has to become acclimatised to the ambient temperature. Approximately two minutes per °C of temperature difference from storage to working environment, but at least 15 min, should be taken into account.

---



Even after adjustment of the Aim360, the crosshairs may not be positioned exactly on the centre of the prism after an Aim360 measurement has been completed. This outcome is a normal effect. The telescope is not normally positioned exactly on the centre of the prism, to speed up the Aim360 measurement. These small deviations/Aim360 offsets, are calculated individually for each measurement and corrected electronically. This means that the horizontal and vertical angles are corrected twice: first by the determined Aim360 errors for Hz and V, and then by the individual small deviations of the current aiming.

### Next step

IF the task is to	THEN
adjust a combination of instrument errors	Refer to "4.3 Combined Adjustment (l, t, i, c and Aim360)".
adjust the tilting axis	Refer to "4.4 Tilting Axis Adjustment (a)".
adjust the circular level	Refer to "4.5 Adjusting the Circular Level of the Instrument and Tribrach".
adjust the laser/optical plummet	Refer to "4.7 Inspecting the Laser Plummet of the Instrument".
adjust the tripod	Refer to "4.8 Servicing the Tripod".

## 4.3 Combined Adjustment (I, t, i, c and Aim360)


### Description


The combined adjustment procedure determines the following instrument errors in one process:


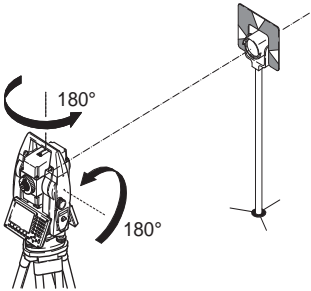

I, t	Compensator longitudinal and transversal index errors
i	Vertical index error, related to the standing axis
c	Horizontal collimation error, also called line of sight error
Aim360 Hz	Aim360 zero point error for horizontal angle option
Aim360 V	Aim360 zero point error for vertical angle option

### Combined adjustment procedure step-by-step


The following table explains the most common settings.

Step	Description
1.	<b>Main Menu: Tools... \Check &amp; Adjust...</b>
2.	<b>TOOLS Check &amp; Adjust Menu</b> Select the option: <b>Combined (I,t,i,c,Aim)</b>
3.	<b>TOOLS Combined I</b> <b>&lt;Aim Adjust: On&gt;</b> Includes the determination of the Aim360 Hz and V adjustment errors.  It is recommended to use a clean GeoMax circular prism as target. Do not use a 360° prism.

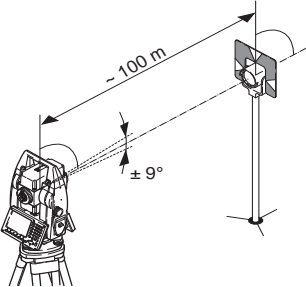Step	Description
4.	 <p data-bbox="895 150 1361 367">Aim the telescope accurately at a target at about 100 m distant. The target must be positioned within <math>\pm 9^\circ / \pm 10</math> gon of the horizontal plane. The procedure can be started in any telescope face.</p>

Step	Description
5.	<p data-bbox="474 184 1256 210"><b>MEAS (F1)</b> to measure and to continue to the next screen.</p> <p data-bbox="899 220 1348 277">Instruments change automatically to the other face.</p> <p data-bbox="899 376 1348 433">  The fine pointing has to be performed manually in both faces.                 </p> 
6.	<p data-bbox="474 614 761 640"><b>TOOLS Combined II</b></p>
	<p data-bbox="474 664 1326 721"><b>MEAS (F1)</b> to measure the same target in the other face and to calculate the instrument errors.</p> <p data-bbox="474 741 1371 866">If one or more errors are bigger than the predefined limits, the procedure has to be repeated. All measurements of the current run are rejected and none of them is averaged with the results from previous runs.</p>



Step	Description
7.	<p><b>TOOLS Adjustment Accuracy</b></p> <p>&lt;<b>No.of Meas:</b>&gt; Shows the number of runs executed. One run consists of a measurement in face I and face II.</p> <p>&lt;<b><math>\sigma</math> I Comp:</b>&gt; and similar lines show the standard deviations of the determined adjustment errors. The standard deviations can be calculated from the second run onwards.</p>
	<p>It is recommended to measure at least two runs.</p>
8.	<p><b>MEAS (F5)</b> if more runs have to be added. Continue with step 3.</p> <p>OR</p> <p><b>CONT (F1)</b> to accept the measurements and to proceed to <b>TOOLS Adjustment Results</b>. No more runs can be added later.</p>

## Next step

IF the results are	THEN
to be stored	<b>CONT (F1)</b> overwrites the old adjustment errors with the new ones, if the <b>Use</b> status is set to <b>Yes</b> .
to be determined again	<b>REDO (F2)</b> rejects all new determined adjustment errors and repeats the whole procedure. Refer to step 3. of paragraph "Combined adjustment procedure step-by-step".


## 4.4 Tilting Axis Adjustment (a)


### Description



This adjustment procedure determines the following instrument error:  
a Tilting axis error


### Determination of tilting axis error step-by-step

The following table explains the most common settings.

Step	Description
	The Hz collimation error (c) has to be determined before starting this procedure.
1.	<b>Main Menu: Tools...\Check &amp; Adjust...</b>
2.	<b>TOOLS Check &amp; Adjust Menu</b> Select the option: <b>Tilting Axis (a)</b>

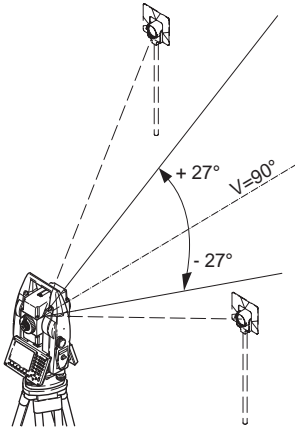Step	Description
3.	<p data-bbox="474 184 947 210"><b>TOOLS Tilting-Axis Adjustment I</b></p>  <p data-bbox="877 220 1365 443">Aim the telescope accurately at a target at about 100 m distance or less if not possible. The target must be positioned at least <math>27^\circ/30</math> gon above or beneath the horizontal plane. The procedure can be started in any telescope face.</p>

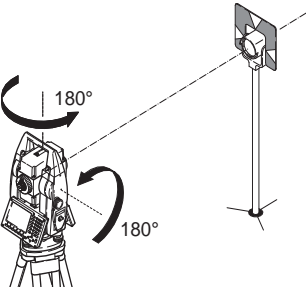Step	Description
4.	<p><b>MEAS (F1)</b> to measure and to continue to the next screen. Instruments change automatically to the other face.</p>  <p>The diagram illustrates the process of flipping the instrument. On the left, the instrument is shown on a tripod. Two curved arrows labeled '180°' indicate the rotation of the instrument around its vertical axis. A dashed line connects the instrument to a separate view of the prism on the right, which is also rotated 180 degrees. A hand icon points to the instrument with the text: 'The fine pointing has to be performed manually in both faces.'</p>
5.	<p><b>TOOLS Tilting-Axis Adjustment II</b></p> <p><b>MEAS (F1)</b> to measure the same target in the other face and to calculate the tilting axis error.</p>
	<p>If the error is bigger than the predefined limit, the procedure has to be repeated. The tilting axis measurements of the current run are then rejected and not averaged with the results from previous runs.</p>

Step	Description
6.	<p><b>TOOLS T-Axis Adjustment Accuracy</b></p> <p>&lt;<b>No.of Meas:</b>&gt; Shows the number of runs executed. One run consists of a measurement in face I and face II.</p> <p>&lt;<b><math>\sigma</math> a T-axis:</b>&gt; shows the standard deviation of the determined tilting axis error. The standard deviation can be calculated from the second run onwards.</p>
	It is recommended to measure at least two runs.
7.	<p><b>MEAS (F5)</b> if more runs have to be added. Continue with step 3.</p> <p>OR</p> <p><b>CONT (F1)</b> to accept the measurements and to proceed to <b>TOOLS T-Axis Adjustment Result</b>. No more runs can be added later.</p>


## Next step

IF the results are	THEN
to be stored	<b>CONT (F1)</b> overwrites the old tilting axis error with the new one.
to be determined again	<b>REDO (F2)</b> rejects the new determined tilting axis error and repeats the whole procedure. Refer to step of paragraph "Determination of tilting axis error step-by-step".

---


## 4.5 Adjusting the Circular Level of the Instrument and Tribrach

Adjusting the circular level step-by-step

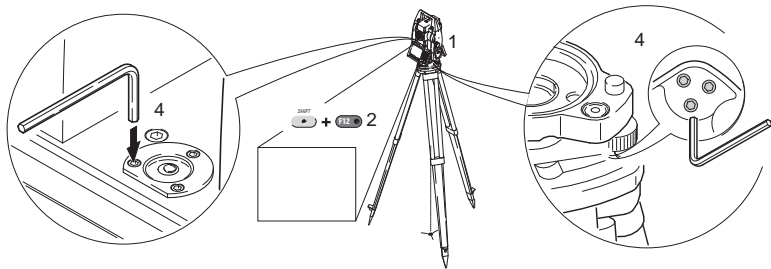

Step	Description
1.	Place and secure the instrument into the tribrach and onto a tripod.
2.	Using the tribrach footscrews, level the instrument with the electronic level. <b>SHIFT (F12)</b> to access <b>STATUS Level &amp; Laser Plummet</b> .
3.	Check the position of the circular level on the instrument and tribrach.



Step	Description
4.	<p>a) If both circular levels are centered, no adjustments are necessary.</p> <p>b) If one or both circular levels are not centered, adjust as follows:</p> <p><b>Instrument:</b> If it extends beyond the circle, use the supplied allen key to centre it with the adjustment screws. Turn the instrument by 200 gon (180°). Repeat the adjustment procedure if the circular level does not stay centered.</p> <p><b>Tribrach:</b> If it extends beyond the circle, use the supplied allen key to centre it with the adjustment screws.</p>
	<p>After the adjustments, all adjusting screws should have the same tightening tension and no adjusting screw shall be loose.</p>

## 4.6 Adjusting the Circular Level of the Prism Pole

### Adjusting the circular level step-by-step


Step	Description	
1.	Suspend a plumb line.	
2.	Use a pole bipod, to align the prism pole parallel to the plumb line.	
3.	Check the position of the circular level on the prism pole.	
4.	a) If the circular level is centred, no adjustment is necessary.	
	b) If the circular level is not centred, use an allen key to centre it with the adjustment screws.	
	After the adjustments, all adjusting screws must have the same tightening tension and no adjusting screw should be loose.	

## 4.7 Inspecting the Laser Plummet of the Instrument




The laser plummet is integrated into the vertical axis of the instrument. Under normal conditions of use, the laser plummet does not need adjusting. If an adjustment is necessary due to external influences, the instrument has to be returned to a GeoMax service workshop.

### Inspecting the laser plummet step-by-step

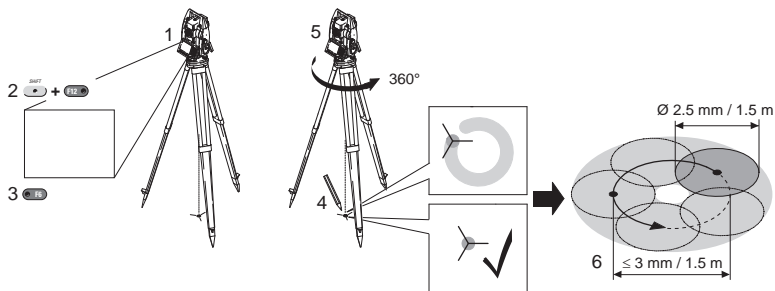

The following table explains the most common settings.


Step	Description
1.	Place and secure the instrument into the tribrach and onto a tripod.
2.	Using the tribrach footscrews, level the instrument with the electronic level. <b>SHIFT (F12)</b> to access <b>STATUS Level &amp; Laser Plummet</b> .
3.	<b>PAGE (F6)</b> to access the <b>Laser Plummet</b> page. Switch on the laser plummet. Inspection of the laser plummet should be carried out on a bright, smooth and horizontal surface, like a sheet of paper.
4.	Mark the centre of the red dot on the ground.
5.	Turn the instrument through 360° slowly, carefully observing the movement of the red laser dot.
	The maximum diameter of the circular movement described by the centre of the laser point should not exceed 3 mm at a distance of 1.5 m.

Step	Description
6.	If the centre of the laser dot describes a perceptible circular movement or moves more than 3 mm away from the point which was first marked, an adjustment may be required. Inform your nearest GeoMax authorised service workshop. Depending on brightness and surface, the diameter of the laser dot can vary. At 1.5 m it is about 2.5 mm.

---


## 4.8 Servicing the Tripod

### Servicing the tripod step-by-step

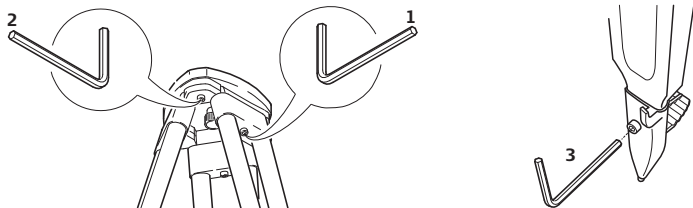

TS\_076

The following table explains the most common settings.

Step	Description
	The connections between metal and timber components must always be firm and tight.
1.	Tighten the leg cap screws moderately, with the supplied allen key.
2.	Tighten the articulated joints on the tripod head enough to keep the tripod legs open when lifting the tripod off the ground.
3.	Tighten the allen screws of the tripod legs.

## 5 Care and Transport

### 5.1 Transport

---

#### **Transport in the field**

When transporting the equipment in the field, always make sure that you

- either carry the product in its original transport container,
- or carry the tripod with its legs splayed across your shoulder, keeping the attached product upright.

---

#### **Transport in a road vehicle**

Never carry the product loose in a road vehicle, as it can be affected by shock and vibration. Always carry the product in its transport container and secure it.

---

#### **Shipping**

When transporting the product by rail, air or sea, always use the complete original GeoMax packaging, transport container and cardboard box, or its equivalent, to protect against shock and vibration.

---

#### **Shipping, transport of batteries**

When transporting or shipping batteries, the person in charge of the product must ensure that the applicable national and international rules and regulations are observed. Before transportation or shipping, contact your local passenger or freight transport company.

---

#### **Field adjustment**

After transport inspect the field adjustment parameters given in this user manual before using the product.

---

---

## 5.2 Storage

---

**Product**

Respect the temperature limits when storing the equipment, particularly in summer if the equipment is inside a vehicle. Refer to "7 Technical Data" for information about temperature limits.

---

**Field adjustment**

After long periods of storage inspect the field adjustment parameters given in this user manual before using the product.

---

**Li-Ion batteries**

- Refer to "7 Technical Data" for information about storage temperature range.
  - At the recommended storage temperature range, batteries containing a 10% to 50% charge can be stored for up to one year. After this storage period the batteries must be recharged.
  - Remove batteries from the product and the charger before storing.
  - After storage recharge batteries before using.
  - Protect batteries from damp and wetness. Wet or damp batteries must be dried before storing or use.
  - A storage temperature range of -20°C to +30°C/-4°F to 86°F in a dry environment is recommended to minimise self-discharging of the battery.
-



## 5.3 Cleaning and Drying

---

### Product and accessories

- Blow dust off lenses and prisms.
  - Never touch the glass with your fingers.
  - Use only a clean, soft, lint-free cloth for cleaning. If necessary, moisten the cloth with water or pure alcohol. Do not use other liquids; these can attack the polymer components.
- 


### Fogging of prisms

Prisms that are cooler than the ambient temperature tend to fog. It is not enough simply to wipe them. Keep them for some time inside your jacket or in the vehicle to allow them to adjust to the ambient temperature.

---

### Damp products

Dry the product, the transport container, the foam inserts and the accessories at a temperature not greater than 40°C/104°F and clean them. Do not repack until everything is dry. Always close the transport container when using in the field.

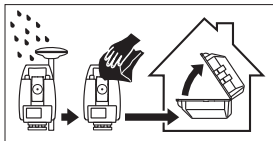

**Cables and plugs**

Keep plugs clean and dry. Blow away any dirt lodged in the plugs of the connecting cables.

---

## 5.4 Maintenance

---

### Motorisation

An inspection of the motorisation in motorised instruments must be done in a GeoMax authorised service workshop.

Following conditions:

- After about 4000 hours operation.
  - Twice a year in case of permanent use of the instrument.
-

---

## 6 Safety Directions

### 6.1 General Introduction

#### Description

---

The following directions enable the person responsible for the product, and the person who actually uses the equipment, to anticipate and avoid operational hazards.

The person responsible for the product must ensure that all users understand these directions and adhere to them.

---

## 6.2 Intended Use

### 6.2.1 Instrument

---

#### Permitted use

- Measuring horizontal and vertical angles.
  - Measuring distances.
  - Recording measurements.
  - Automatic target search, recognition and -tracking.
  - Visualising the aiming direction and vertical axis.
  - Remote control of product.
  - Data communication with external appliances.
  - Computing with software.
-

**Adverse use**

- Use of the product without instruction.
- Use outside of the intended limits.
- Disabling safety systems.
- Removal of hazard notices.
- Opening the product using tools, for example screwdriver, unless this is permitted for certain functions.
- Modification or conversion of the product.
- Use after misappropriation.
- Use of products with recognisable damages or defects.
- Use with accessories from other manufacturers without the prior explicit approval of GeoMax.
- Aiming directly into the sun.
- Inadequate safeguards at the working site, for example when measuring on roads.
- Deliberate dazzling of third parties.
- Controlling of machines, moving objects or similar monitoring application without additional control- and safety installations.


**WARNING**

Adverse use can lead to injury, malfunction and damage.

It is the task of the person responsible for the equipment to inform the user about hazards and how to counteract them. The product is not to be operated until the user has been instructed on how to work with it.

---

## 6.2.2 Controller

---

### Permitted use

- Remote control of product.
  - Data communication with external appliances.
- 

### Adverse use

- Use of the product without instruction.
- Use outside of the intended limits.
- Disabling safety systems.
- Removal of hazard notices.
- Opening the product using tools, for example screwdriver, unless this is permitted for certain functions.
- Modification or conversion of the product.
- Use after misappropriation.
- Use of products with recognisable damages or defects.
- Use with accessories from other manufacturers without the prior explicit approval of GeoMax.
- Inadequate safeguards at the working site, for example when measuring on roads.
- Controlling of machines, moving objects or similar monitoring application without additional control- and safety installations.

**WARNING**

Adverse use can lead to injury, malfunction and damage.

It is the task of the person responsible for the equipment to inform the user about hazards and how to counteract them. The product is not to be operated until the user has been instructed on how to work with it.

---



## 6.3 Limits of Use

---

### Environment

Suitable for use in an atmosphere appropriate for permanent human habitation: not suitable for use in aggressive or explosive environments.

---



### DANGER

Local safety authorities and safety experts must be contacted before working in hazardous areas, or close to electrical installations or similar situations by the person in charge of the product.

---

## 6.4 Responsibilities

---

### **Manufacturer of the product**

GeoMax AG, CH-9443 Widnau, hereinafter referred to as GeoMax, is responsible for supplying the product, including the user manual and original accessories, in a safe condition.

---

### **Manufacturers of non GeoMax accessories**

The manufacturers of non GeoMax accessories for the product are responsible for developing, implementing and communicating safety concepts for their products, and are also responsible for the effectiveness of those safety concepts in combination with the GeoMax product.

---

### **Person in charge of the product**

The person in charge of the product has the following duties:

- To understand the safety instructions on the product and the instructions in the user manual.
  - To be familiar with local regulations relating to safety and accident prevention.
  - To inform GeoMax immediately if the product and the application becomes unsafe.
  - To ensure that the national laws, regulations and conditions for the operation of radio transmitters are respected.
-



## **WARNING**

The person responsible for the product must ensure that it is used in accordance with the instructions. This person is also accountable for the training and the deployment of personnel who use the product and for the safety of the equipment in use.

---

---

## 6.5 Hazards of Use

---



### WARNING

The absence of instruction, or the inadequate imparting of instruction, can lead to incorrect or adverse use, and can cause accidents with far-reaching human, material, financial and environmental consequences.

**Precautions:**

All users must follow the safety directions given by the manufacturer and the directions of the person responsible for the product.

---



### CAUTION

Watch out for erroneous measurement results if the product has been dropped or has been misused, modified, stored for long periods or transported.

**Precautions:**

Periodically carry out test measurements and perform the field adjustments indicated in the user manual, particularly after the product has been subjected to abnormal use and before and after important measurements.

---



### DANGER

Because of the risk of electrocution, it is dangerous to use poles and extensions in the vicinity of electrical installations such as power cables or electrical railways.

**Precautions:**

Keep at a safe distance from electrical installations. If it is essential to work in this environment, first contact the safety authorities responsible for the electrical installations and follow their instructions.

**⚠ CAUTION**

With the remote control of products, it is possible that extraneous targets will be picked out and measured.

**Precautions:**

When measuring in remote control mode, always check your results for plausibility.

**⚠ CAUTION**

Be careful when pointing the product towards the sun, because the telescope functions as a magnifying glass and can injure your eyes and/or cause damage inside the product.

**Precautions:**

Do not point the product directly at the sun.

 **WARNING**

During dynamic applications, for example stakeout procedures there is a danger of accidents occurring if the user does not pay attention to the environmental conditions around, for example obstacles, excavations or traffic.

**Precautions:**

The person responsible for the product must make all users fully aware of the existing dangers.

---

 **WARNING**

Inadequate securing of the working site can lead to dangerous situations, for example in traffic, on building sites, and at industrial installations.

**Precautions:**

Always ensure that the working site is adequately secured. Adhere to the regulations governing safety and accident prevention and road traffic.

---


 **WARNING**

If computers intended for use indoors are used in the field there is a danger of electric shock.

**Precautions:**

Adhere to the instructions given by the computer manufacturer regarding field use with GeoMax products.

---

 **CAUTION**

If the accessories used with the product are not properly secured and the product is subjected to mechanical shock, for example blows or falling, the product may be damaged or people can sustain injury.

**Precautions:**

When setting-up the product, make sure that the accessories are correctly adapted, fitted, secured, and locked in position.

Avoid subjecting the product to mechanical stress.

---

 **WARNING**

If the product is used with accessories, for example masts, staffs, poles, you may increase the risk of being struck by lightning.

**Precautions:**

Do not use the product in a thunderstorm.

---

 **WARNING**

Using a battery charger not recommended by GeoMax can destroy the batteries. This can cause fire or explosions.

**Precautions:**

Only use chargers recommended by GeoMax to charge the batteries.

---

 CAUTION

During the transport, shipping or disposal of batteries it is possible for inappropriate mechanical influences to constitute a fire hazard.

**Precautions:**

Before shipping the product or disposing of it, discharge the batteries by running the product until they are flat.

When transporting or shipping batteries, the person in charge of the product must ensure that the applicable national and international rules and regulations are observed. Before transportation or shipping contact your local passenger or freight transport company.

---

 WARNING

High mechanical stress, high ambient temperatures or immersion into fluids can cause leakage, fire or explosions of the batteries.

**Precautions:**

Protect the batteries from mechanical influences and high ambient temperatures. Do not drop or immerse batteries into fluids.

---

 WARNING

If battery terminals come in contact with jewellery, keys, metallised paper or other metals, short circuited battery terminals can overheat and cause injury or fire, for example by storing or transporting in pockets.

**Precautions:**

Make sure that the battery terminals do not come into contact with metallic objects.

---




 **WARNING**

If the product is improperly disposed of, the following can happen:

- If polymer parts are burnt, poisonous gases are produced which may impair health.
- If batteries are damaged or are heated strongly, they can explode and cause poisoning, burning, corrosion or environmental contamination.
- By disposing of the product irresponsibly you may enable unauthorised persons to use it in contravention of the regulations, exposing themselves and third parties to the risk of severe injury and rendering the environment liable to contamination.

**Precautions:**



The product must not be disposed with household waste. Dispose of the product appropriately in accordance with the national regulations in force in your country. Always prevent access to the product by unauthorised personnel.

Product-specific treatment and waste management information is available from GeoMax AG.

 **WARNING**

Only GeoMax authorised service workshops are entitled to repair these products.

## 6.6 Laser Classification

### 6.6.1 General

#### General

The following chapters provide instructions and training information for the safe use of lasers according to international standard IEC 60825-1 (2007-03) and technical report IEC TR 60825-14 (2004-02). The information enables the person responsible for the product and the person who actually uses the equipment, to anticipate and avoid operational hazards.

The person responsible for the product must ensure that everyone understands the instructions and adheres to them.



According to IEC TR 60825-14 (2004-02), products classified as laser class 1, class 2 and class 3R do not require:

- mandatory involvement of a laser safety officer,
- protective clothes and eyewear,
- special warning signs in the laser working area

due to the low level eye hazard and if used and operated as defined in this User Manual.



National laws and local regulations could impose more stringent instructions for the safe use of lasers than IEC 60825-1 (2007-03) and IEC TR 60825-14.

## 6.6.2 Distancer, Measurements with Reflectors

---

### General

The EDM module built into the product produces a visible laser beam which emerges from the telescope objective.

The laser product described in this section is classified as laser class 1 in accordance with:

- IEC 60825-1 (2007-03): "Safety of laser products"
- EN 60825-1 (2007-10): "Safety of laser products"

Class 1 laser products are safe under reasonably foreseeable conditions of operation and are not harmful to the eyes provided that the products are used and maintained in accordance with this User Manual.

Description	Value
Maximum average radiant power	0.33 mW
Pulse duration	800 ps
Pulse repetition frequency	100 MHz - 150 MHz
Wavelength	650 nm - 690 nm


---

## Labelling

Class 1 Laser Product  
according to  
IEC 60825-1 (2007 - 03)





**Type: Zoom80** Art.No.: .....

Equip.No.: .....

Power: 12V/7,4V  1A max S.No.: .....

GeoMax AG

CH-9443 Widnau


Manufactured: ....    

Made in Switzerland

Complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No.50, dated June 24, 2007.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

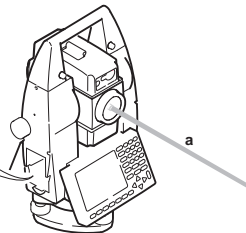

Zoom80\_010

a) Laser beam

## 6.6.3 Distancer, Measurements without Reflectors

---

### General

The EDM module built into the product produces a visible laser beam which emerges from the telescope objective.

The laser product described in this section is classified as laser class 3R in accordance with:

- IEC 60825-1 (2007-03): "Safety of laser products"
- EN 60825-1 (2007-10): "Safety of laser products"

Class 3R laser products:

Direct intrabeam viewing may be hazardous (low eye hazard level), in particular for deliberate ocular exposure. The beam may cause dazzle, flash-blindness and after-images, particularly under low ambient light conditions. The risk of injury for laser class 3R products is limited because of:

- a) unintentional exposure would rarely reflect worst case conditions of (e.g.) beam alignment with the pupil, worst case accommodation,
- b) inherent safety margin in the maximum permissible exposure to laser radiation (MPE)
- c) natural aversion behaviour for exposure to bright light for the case of visible radiation.

Description	Value (R1000)
Maximum average radiant power	5.00 mW
Pulse duration	800 ps
Pulse repetition frequency	100 MHz - 150 MHz
Wavelength	650 nm - 690 nm
Beam divergence	0.2 mrad x 0.3 mrad
NOHD (Nominal Ocular Hazard Distance) @ 0.25s	80 m / 262 ft


**CAUTION**

From a safety perspective, class 3R laser products should be treated as potentially hazardous.

**Precautions:**

- 1) Prevent direct eye exposure to the beam.
- 2) Do not direct the beam at other people.




## CAUTION

Potential hazards are not only related to direct beams but also to reflected beams aimed at reflecting surfaces such as prisms, windows, mirrors, metallic surfaces, and so on.

### **Precautions:**

- 1) Do not aim at areas that are essentially reflective, such as a mirror, or which could emit unwanted reflections.
  - 2) Do not look through or beside the optical sight at prisms or reflecting objects when the laser is switched on, in laser pointer or distance measurement mode. Aiming at prisms is only permitted when looking through the telescope.
-

Labelling

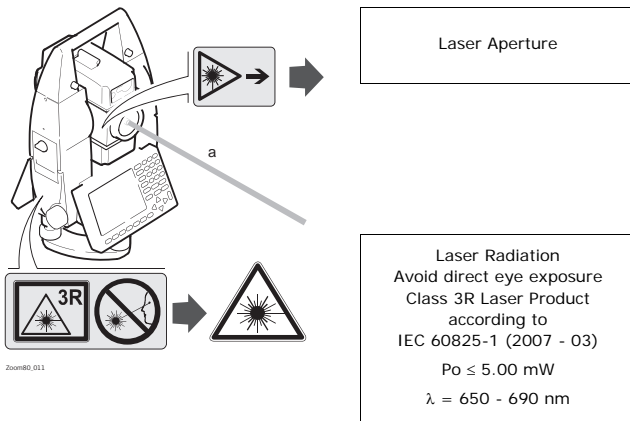

a) Laser beam


Zoom80\_011



Type: **Zoom80** Art.No.: . . . . .  
Equip.No.: . . . . .  
Power: 12V/7.4V  $\approx$ , 1A max S.No.: . . . . .  
GeoMax AG  
CH-9443 Widnau  
Manufactured: . . . . .  
Made in Switzerland

25

Complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No.50, dated June 24, 2007.  
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

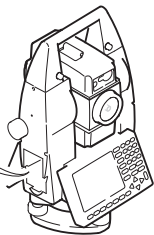

Zoom80\_012

## 6.6.4 Aim360

### General

The Aim360 built into the product produces an invisible laser beam which emerges from the telescope objective.

The laser product described in this section is classified as laser class 1 in accordance with:

- IEC 60825-1 (2007-03): "Safety of laser products"
- EN 60825-1 (2007-10): "Safety of laser products"

Class 1 laser products are safe under reasonably foreseeable conditions of operation and are not harmful to the eyes provided that the products are used and maintained in accordance with this User Manual.

Description	Value
Maximum average radiant power	10 mW
Pulse duration	11 ms
Pulse repetition frequency	37 Hz
Wavelength	785 nm


## Labelling

Class 1 Laser Product  
according to  
IEC 60825-1 (2007 - 03)

Type: **Zoom80** Art.No.: .....  
Equip.No.: .....  
Power: 12V/7,4V  $\overline{\text{---}}$ , 1A max S.No.: .....  
GeoMax AG  
CH-9443 Widnau  
Manufactured: .....  
Made in Switzerland



Complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No.50, dated June 24, 2007.  
This device complies with part 15 of the FCC Rules.  
Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

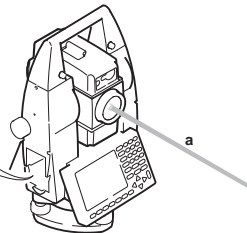

Zoom80\_010

a) Laser beam

## 6.6.5 Scout360

### General

The Scout360 built into the product produces an invisible laser beam which emerges from the front side of the telescope.

The laser product described in this section is classified as laser class 1 in accordance with:

- IEC 60825-1 (2007-03): "Safety of laser products"
- EN 60825-1 (2007-10): "Safety of laser products"



Class 1 laser products are safe under reasonably foreseeable conditions of operation and are not harmful to the eyes provided that the products are used and maintained in accordance with this User Manual.

Description	Value
Maximum average radiant power	11 mW
Pulse duration	20 ns, 40 ns
Pulse repetition frequency	24.4 kHz
Wavelength	850 nm

## Labelling


Class 1 Laser Product  
according to  
IEC 60825-1 (2007 - 03)

**Type: Zoom80** Art.No.: .....  
Equip.No.: .....  
Power: 12V/7,4V ---, 1A max S.No.: .....  
GeoMax AG .....  
CH-9443 Widnau .....  
Manufactured: .....  
Made in Switzerland

25  

Complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No.50, dated June 24, 2007.  
This device complies with part 15 of the FCC Rules.  
Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

Zoom80\_013

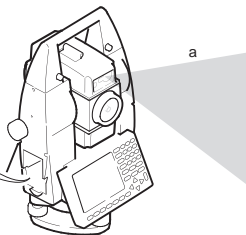

a) Laser beam

## 6.6.6 Navigation Light

---

### General

The integrated Navigation Light produces a visible LED beam from the front side of the telescope.




The product described in this section, is excluded from the scope of IEC 60825-1 (2007-03): "Safety of laser products".

The product described in this section, is classified as exempt group in accordance with IEC 62471 (2006-07) and does not pose any hazard provided that the product is used and maintained in accordance with this user manual.

Class 1 LED Product  
according to  
IEC 60825-1 (2001 - 08)

**Type: Zoom80** Art.No.: .....  
Equip.No.: .....  
Power: 12V/7,4V ≈, 1A max S.No.: .....  
GeoMax AG  
CH-9443 Widnau  
Manufactured: .....  
Made in Switzerland

Complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No.50, dated June 24, 2007.  
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

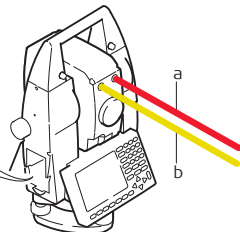

Zoom80\_014

- a) LED beam red
- b) LED beam yellow

## 6.6.7 Laser Plummet

### General

The laser plummet built into the product produces a visible red laser beam which emerges from the bottom of the product.

The laser product described in this section, is classified as laser class 2 in accordance with:

- IEC 60825-1 (2007-03): "Safety of laser products".
- EN 60825-1 (2007-10): "Safety of laser products".

Class 2 laser products:

These products are safe for momentary exposures but can be hazardous for deliberate staring into the beam.

Description	Value
Maximum average radiant power	1.00 mW
Pulse duration	0 - 100 %
Pulse repetition frequency	1 kHz
Wavelength	635 nm






## CAUTION

From a safety perspective, class 2 laser products are not inherently safe for the eyes.

### **Precautions:**

- 1) Avoid staring into the beam.
  - 2) Avoid pointing the beam at other people.
-

## Labelling

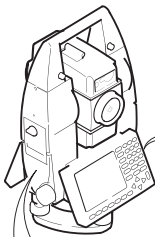

<b>Type: Zoom80</b>	Art.No.: .....
Equip.No.: .....	.....
Power: 12V/7,4V ~~, 1A max	S.No.: .....
GeoMax AG	.....
CH-9443 Widnau	
Manufactured: .....	
Made in Switzerland	

Complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No.50, dated June 24, 2007.

This device complies with part 15 of the FCC Rules.


Operation is subject to the following two conditions:  
 (1) This device may not cause harmful interference, and  
 (2) this device must accept any interference received, including interference that may cause undesired operation.



Zoom80\_015

**Laser Radiation**  
 Do not stare into the beam  
 Class 2 Laser Product  
 according to  
 IEC 60825-1 (2007 - 03)  
  
 $P_o \leq 1.00 \text{ mW}$   
 $\lambda = 620 - 690 \text{ nm}$

a) Will be replaced by a class 3R warning label if applicable

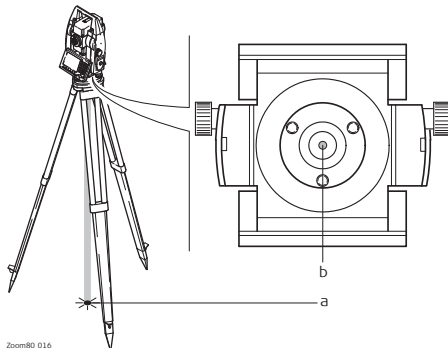

Zoom80\_016

- a) Laser beam
  - b) Exit for laser beam
-

---

## 6.7 Electromagnetic Compatibility EMC

---

### Description

The term Electromagnetic Compatibility is taken to mean the capability of the product to function smoothly in an environment where electromagnetic radiation and electrostatic discharges are present, and without causing electromagnetic disturbances to other equipment.

---



### WARNING

Electromagnetic radiation can cause disturbances in other equipment.

Although the product meets the strict regulations and standards which are in force in this respect, GeoMax cannot completely exclude the possibility that other equipment may be disturbed.

---



### CAUTION

There is a risk that disturbances may be caused in other equipment if the product is used with accessories from other manufacturers, for example field computers, personal computers, two-way radios, non-standard cables or external batteries.

#### **Precautions:**

Use only the equipment and accessories recommended by GeoMax. When combined with the product, they meet the strict requirements stipulated by the guidelines and standards. When using computers and two-way radios, pay attention to the information about electromagnetic compatibility provided by the manufacturer.

---

 **CAUTION**

Disturbances caused by electromagnetic radiation can result in erroneous measurements.

Although the product meets the strict regulations and standards which are in force in this respect, GeoMax cannot completely exclude the possibility that the product may be disturbed by intense electromagnetic radiation, for example, near radio transmitters, two-way radios or diesel generators.

**Precautions:**

Check the plausibility of results obtained under these conditions.

---

 **WARNING**

If the product is operated with connecting cables attached at only one of their two ends, for example external supply cables, interface cables, the permitted level of electromagnetic radiation may be exceeded and the correct functioning of other products may be impaired.

**Precautions:**

While the product is in use, connecting cables, for example product to external battery, product to computer, must be connected at both ends.

---

**Radios or digital  
cellular phones****WARNING**

Use of product with radio or digital cellular phone devices:

Electromagnetic fields can cause disturbances in other equipment, in installations, in medical devices, for example pacemakers or hearing aids and in aircraft. It can also affect humans and animals.

**Precautions:**

Although the product meets the strict regulations and standards which are in force in this respect, GeoMax cannot completely exclude the possibility that other equipment can be disturbed or that humans or animals can be affected.

- Do not operate the product with radio or digital cellular phone devices in the vicinity of filling stations or chemical installations, or in other areas where an explosion hazard exists.
  - Do not operate the product with radio or digital cellular phone devices near to medical equipment.
  - Do not operate the product with radio or digital cellular phone devices in aircraft.
-

## 6.8 FCC Statement, Applicable in U.S.

---



### WARNING

The greyed paragraph below is only applicable for products without radio.

---

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.


If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and the receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
-




Changes or modifications not expressly approved by GeoMax for compliance could void the user's authority to operate the equipment.


### Labelling Zoom80

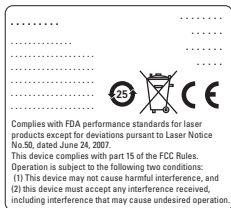


Zoom80\_017

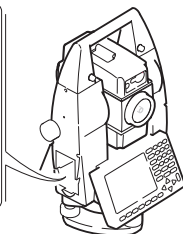

### Labelling Zoom80 C

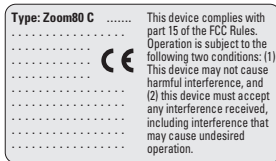


Zoom80\_018

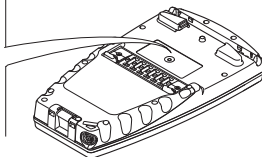



## Labelling internal battery ZBA400

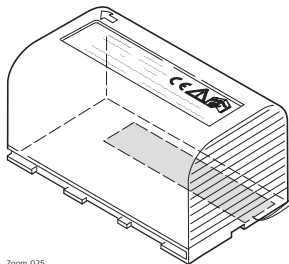


Zoom\_025

*This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.*

 US LISTED  
ITE Accessory  
E179078 . 70YL


## Labelling internal battery ZBA200

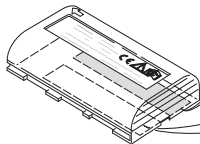

ZBA200\_016


*This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.*

 US LISTED  
ITE Accessory  
E179078 . 70YL






## Labelling ZRT80
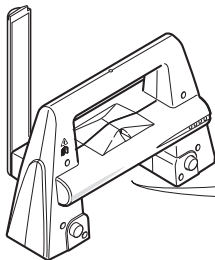
## ZRT80



Zoom80\_019

<p><b>Type: ZRT80</b> Art.No.: .....</p> <p>Power: 7.4/12V --- nominal / 0.2A max. 100 mW EIRP</p> <p>GeoMax AG CH-9443 Widnau Manufactured: . . . . . Made in Switzerland</p> <p>Contains Transmitter Module: FCC ID: HSW-2400M</p>		<p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p>
<p>FCC ID: HSW-2400M</p>	 	<p>S.No.: XXXXXX</p>

## 7 Technical Data

### 7.1 Instrument

#### 7.1.1 General Technical Data of the Instrument

##### Telescope

---

Magnification:	30 x
Clear objective diameter:	40 mm
Focusing:	1.7 m/5.6 ft to infinity
Field of view:	1°30'/1.66 gon. 2.7 m at 100 m

---

##### Compensator

---

Type	Setting accuracy		Setting range	
	["]	[mgon]	[']	[gon]
Zoom80 S/R 2"	0.5	0.2	4	0.07
Zoom80 S/R 5"	1.5	0.5	4	0.07

---

##### Level

---

Circular level sensitivity:	6'/2 mm
Electronic level resolution:	2"

---



**Control unit**

Display:	1/4 VGA (320 x 240 pixels), colour, graphics capable LCD, illumination, touch screen
Keyboard:	34 keys including 12 function keys and 12 alphanumeric keys, illumination
Angle Display:	360°", 360° decimal, 400 gon, 6400 mil, V %
Distance Display:	m, ft int, ft us, ft int inch, ft us inch
Position:	In both faces, face two is optional
Touch screen:	Toughened film on glass

**Instrument Ports**

Port	Name	Description
Port 1	Port 1	<ul style="list-style-type: none"> <li>5 pin LEMO-0 for power, communication, data transfer.</li> <li>This port is located at the base of the instrument.</li> </ul>
Port 2	Handle	<ul style="list-style-type: none"> <li>Hotshoe connection for ZRT80 with RCS.</li> </ul>
Port 3	BT	<ul style="list-style-type: none"> <li>Bluetooth module for communication.</li> </ul>

## Instrument Dimensions

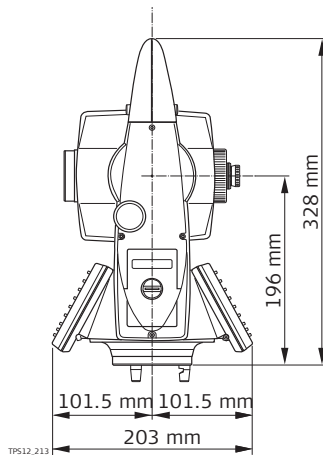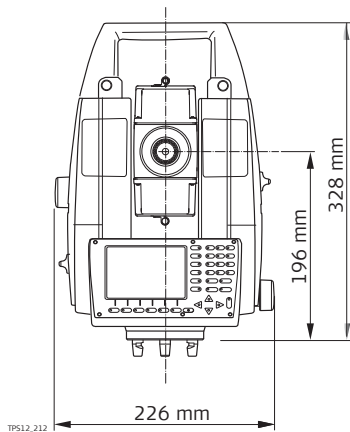

## Weight

Instrument:	4.8 - 5.5 kg
Tribrach:	0.76 kg
Internal battery ZBA400:	0.2 kg

**Recording**

Data can be recorded onto a CompactFlash card.

Type	Capacity [MB]	Number of measurements per MB
CompactFlash card	256	1750

**Laser plummet**

Type: Visible red laser class 2  
 Location: In standing axis of instrument  
 Accuracy: Deviation from plumb line:  
 1.5 mm (2 sigma) at 1.5 m instrument height  
 Diameter of laser point: 2.5 mm at 1.5 m instrument height

**Drives**

Type: Endless horizontal and vertical drives

**Motorisation**

Maximum rotating speed: 45° (50 gon)/s

**Power**

External supply voltage: Nominal voltage 12.8 V DC, Range 11.5 V-13.5 V

**Internal battery**

Type: Li-Ion  
 Voltage: 7.4 V  
 Capacity: ZBA400: 4.4 Ah

## Environmental specifications

### Temperature

Type	Operating temperature [°C]	Storage temperature [°C]
Instrument	-20 to +50	-40 to +70
GeoMax Compact-Flash cards, all sizes	-40 to +80	-40 to +80
Battery internal	-20 to +55	-40 to +70
Bluetooth	-30 to +60	-40 to +80

### Protection against water, dust and sand

Type	Protection
Instrument	IP54 (IEC 60529)

### Humidity

Type	Protection
Instrument	Max 95 % non condensing The effects of condensation are to be effectively counteracted by periodically drying out the instrument.

### Reflectors

Type	Additive Constant [mm]	Aim360	Scout360
Circular prism	0.0	yes	yes
Mini prism	+17.5	yes	yes
Mini 0	0	yes	yes
360° prism	+23.1	yes	yes
360° Mini prism	+30.0	yes	not recommended
Reflective tape	+34.4	yes	no
Reflectorless	+34.4	no	no

There are no special prisms required for Aim360 or for Scout360.



## Navigation Light

Working range:	5 m to 150 m (15 ft to 500 ft)
Position accuracy:	5 cm at 100 m (1.97" at 330 ft)

---

## Automatic corrections

The following automatic corrections are made:

- Line of sight error
  - Tilting axis error
  - Earth curvature
  - Circle eccentricity
  - Compensator index error
  - Vertical index error
  - Standing axis tilt
  - Refraction
  - Aim360 zero point error
-

## 7.1.2 Angle Measurement

### Accuracy

Type	std. dev. Hz, V, ISO 17123-3		Display least count	
	["]	[mgon]	["]	[mgon]
Zoom80 S/R	2	0.6	0.1	0.1
Zoom80 S/R	5	1.5	0.1	0.5

### Characteristics

Absolute, continuous, diametric.

### 7.1.3 Distance Measurement with Reflectors

Range

Reflector	Range A		Range B		Range C	
	[m]	[ft]	[m]	[ft]	[m]	[ft]
Circular prism	1800	6000	3000	10000	3500	12000
3 prisms	2300	7500	4500	14700	5400	17700
360° prism	800	2600	1500	5000	2000	7000
360° Mini prism	450	1500	800	2600	1000	3300
Mini prism	800	2600	1200	4000	2000	7000
Reflective tape 60 mm x 60 mm	150	500	250	800	250	800

Shortest measuring distance: 1.5 m

**Atmospheric conditions**

Range A: Strong haze, visibility 5 km; or strong sunlight, severe heat shimmer

Range B: Light haze, visibility about 20 km; or moderate sunlight, slight heat shimmer

Range C: Overcast, no haze, visibility about 40 km; no heat shimmer



Measurements can be made to reflector tapes over the entire range without external ancillary optics.

**Accuracy**

Accuracy refers to measurements to standard prisms.

EDM measuring mode	std. dev. ISO 17123-4, standard prism	std. dev. ISO 17123-4, tape	Measurement time, typical [s]
Standard	1 mm + 1.5 ppm	5 mm + 2 ppm	2.4
Fast	3 mm + 1.5 ppm	5 mm + 2 ppm	0.8
Tracking	3 mm + 1.5 ppm	5 mm + 2 ppm	< 0.15

Beam interruptions, severe heat shimmer and moving objects within the beam path can result in deviations of the specified accuracy. The display resolution is 0.1 mm.

**Characteristics**

Principle: Phase measurement  
 Type: Coaxial, visible red laser  
 Carrier wave: 658 nm  
 Measuring system: System analyser basis 100 MHz - 150 MHz

## 7.1.4 Distance Measurement without Reflectors

### Range

Type	Kodak Gray Card	Range D		Range E		Range F	
		[m]	[ft]	[m]	[ft]	[m]	[ft]
accXess10	White side, 90 % reflective	800	2630	1000	3280	>1000	>3280
accXess10	Grey side, 18 % reflective	400	1320	500	1640	>500	>1640

Range of Measurement: 1.5 m - 1200 m

Display unambiguous: up to 1200 m

### Atmospheric conditions

D: Object in strong sunlight, severe heat shimmer

E: Object in shade, sky overcast

F: Underground, night and twilight

**Accuracy**

Standard measuring	std. dev. ISO 17123-4	Measure time, typical [s]	Measure time, maximum [s]
0 m - 500 m	2 mm + 2 ppm	3 - 6	12
>500 m	4 mm + 2 ppm	3 - 6	12

Object in shade, sky overcast. Beam interruptions, severe heat shimmer and moving objects within the beam path can result in deviations of the specified accuracy. The display resolution is 0.1 mm.

**Characteristics**

Type:	Coaxial, visible red laser
Carrier wave:	658 nm
Measuring system:	System analyser basis 100 MHz - 150 MHz

**Laser dot size**

Distance [m]	Laser dot size, approximately [mm]
at 30	7 x 10
at 50	8 x 20

## 7.1.5 Distance Measurement - Long Range (LO mode)

### Range

Reflector	Range A		Range B		Range C	
	[m]	[ft]	[m]	[ft]	[m]	[ft]
Circular prism	2200	7300	7500	24600	>10000	>32800

Range of measurement:

1000 m to 12000 m

Display unambiguous:

up to 12000 m

### Atmospheric conditions

Range A: Strong haze, visibility 5 km; or strong sunlight, severe heat shimmer

Range B: Light haze, visibility about 20 km; or moderate sunlight, slight heat shimmer

Range C: Overcast, no haze, visibility about 40 km; no heat shimmer

### Accuracy

Standard measuring	std. dev. ISO 17123-4	Measure time, typical [s]	Measure time, maximum [s]
Long Range	5 mm + 2 ppm	2.5	12

Beam interruptions, severe heat shimmer and moving objects within the beam path can result in deviations of the specified accuracy. The display resolution is 0.1 mm.

**Characteristics**

---


Principle:	Phase measurement
Type:	Coaxial, visible red laser
Carrier wave:	658 nm
Measuring system:	System analyser basis 100 MHz - 150 MHz

---



## 7.1.6 Aim360

Range Aim360/  
Track360

Reflector	Range Aim360 mode		Range Track360 mode	
	[m]	[ft]	[m]	[ft]
Circular prism	1000	3300	800	2600
360° prism	800	2600	600	2000
360° Mini prism	350	1150	300	1000
Mini prism	500	1600	400	1300
Reflective tape 60 mm x 60 mm	55	175	not qualified	
 The maximum range can be restricted by poorer conditions, for example rain.				

Shortest measuring distance: 360° prism Aim360: 1.5 m


Shortest measuring distance: 360° prism Track360: 5 m

**Aim360 accuracy  
with the circular  
prism**

Aim360 angle accuracy Hz, V (std. dev. ISO 17123-3):	1 " (0.3 mgon)
Base Positioning accuracy (std.dev.):	± 1 mm

**System accuracy  
with Aim360**

- The accuracy with which the position of a prism can be determined with Aim360 depends on several factors such as internal Aim360 accuracy, instrument angle accuracy, prism type, selected EDM measuring program and the external measuring conditions. The Aim360 has a basic standard deviation level of ± 1 mm. Above a certain distance, the instrument angle accuracy predominates and takes over the standard deviation of the Aim360.
- The following graph shows the Aim360 standard deviation based on different prism types, distances and instrument accuracies.

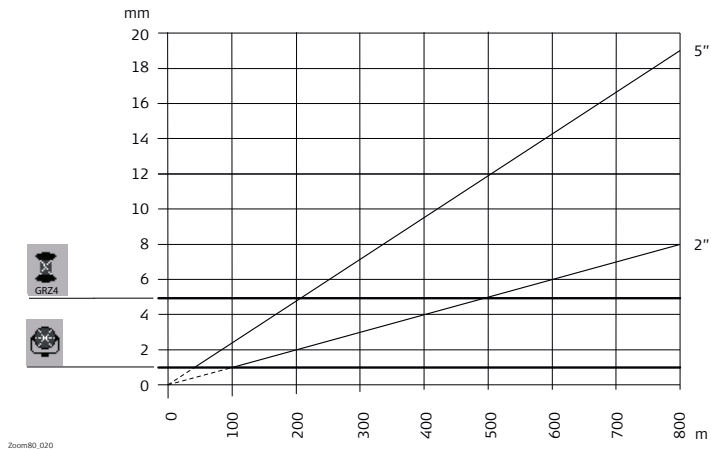

Zoom80\_020



Leica GRZ4 prism (360°)



Circular prisms and circular Mini prisms

mm Aim360 accuracy [mm]  
 m Distance measurement [m]  
 " Instrument angle accuracy ["]

**Maximum speed  
 in Track360  
 mode**

Maximum tangential speed: 5 m/s at 20 m; 25 m/s at 100 m  
 Maximum radial speed with  
 <EDM Mode: Tracking> 5 m/s

**Searching**

Typical search time in field of view: 1.5 s  
 Field of view: 1°25'/1.55 gon  
 Definable search windows: Yes

**Characteristics**

Principle: Digital image processing  
 Type: Infrared laser

## 7.1.7 Scout360

### Range

Reflector	Range Track360	
	[m]	[ft]
Circular prism	300	1000
360° prism	300*	1000*
Mini prism	100	330

Measurements at the vertical limits of the fan or under unfavourable atmospheric conditions may reduce the maximum range. (\*optimally aligned to the instrument)

Shortest measuring distance: 1.5 m

### Searching

Typical search time: < 10 s  
Default search area: Hz: 400 gon, V: 40 gon  
Definable search windows: Yes

### Characteristics

Principle: Digital signal processing  
Type: Infrared laser

---

## 7.1.8 Scale Correction

### Use of scale correction

By entering a scale correction, reductions proportional to distance can be taken into account.

- Atmospheric correction.
- Reduction to mean sea level.
- Projection distortion.

---

### Atmospheric correction $\Delta D1$

The slope distance displayed is correct if the scale correction in ppm, mm/km, which has been entered corresponds to the atmospheric conditions prevailing at the time of the measurement.

The atmospheric correction includes:

- Adjustments for air pressure
- Air temperature
- Relative humidity

For highest precision distance measurements, the atmospheric correction should be determined with an accuracy of 1 ppm. The following parameters must be redetermined:


- Air temperature to 1 °C
  - Air pressure to 3 mbar
  - Relative humidity to 20 %
-

## Air humidity

The air humidity influences the distance measurement if the climate is extremely hot and damp.

For high precision measurements, the relative humidity must be measured and entered along with the air pressure and the temperature.

## Air humidity correction

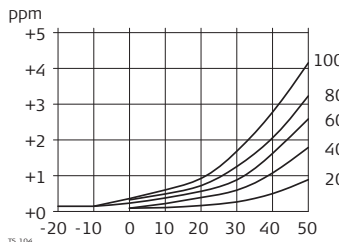

ppm Air humidity correction [mm/km]  
% Relative humidity [%]  
C° Air temperature [°C]

## Index n

Type	Index n	carrier wave [nm]
combined EDM	1.0002863	658

The index n is calculated from the formula of Barrel and Sears, and is valid for:

Air pressure p: 1013.25 mbar  
Air temperature t: 12 °C  
Relative air humidity h: 60 %

## Formulas

Formula for visible red laser

$$\Delta D_1 = 286.34 - \left[ \frac{0.29525 \cdot p}{(1 + \alpha \cdot t)} - \frac{4.126 \cdot 10^{-4} \cdot h}{(1 + \alpha \cdot t)} \cdot 10^x \right]$$

TS\_105

 $\Delta D_1$  Atmospheric correction [ppm]

p Air pressure [mbar]

t Air temperature [°C]

h Relative humidity [%]

 $\alpha = \frac{1}{273.15}$ 
 $x = (7.5 \cdot t / (237.3 + t)) + 0.7857$ 

If the basic value of 60 % relative humidity as used by the EDM is retained, the maximum possible error in the calculated atmospheric correction is 2 ppm, 2 mm/km.

---



## Reduction to mean sea level

$\Delta D_2$

The values for  $\Delta D_2$  are always negative and are derived from the following formula:

$$\Delta D_2 = -\frac{H}{R} \cdot 10^6$$

TS.106

$\Delta D_2$  Reduction to mean sea level [ppm]

H Height of EDM above sea level [m]

R  $6.378 \cdot 10^6$  m

## Projection distortion $\Delta D_3$

The magnitude of the projection distortion is in accordance with the projection system used in a particular country, for which official tables are generally available. The following formula is valid for cylindrical projections such as that of Gauss-Krüger:

$$\Delta D_3 = \frac{X^2}{2R^2} \cdot 10^6$$

TS.107

$\Delta D_3$  Projection distortion [ppm]


X Easting, distance from projection zero line with the scale factor 1 [km]

R  $6.378 \cdot 10^6$  m

In countries where the scale factor is not unity, this formula cannot be directly applied.


**Atmospheric  
corrections °C**

Atmospheric corrections in ppm with temperature [°C], air pressure [mb] and height [m] at 60 % relative humidity.

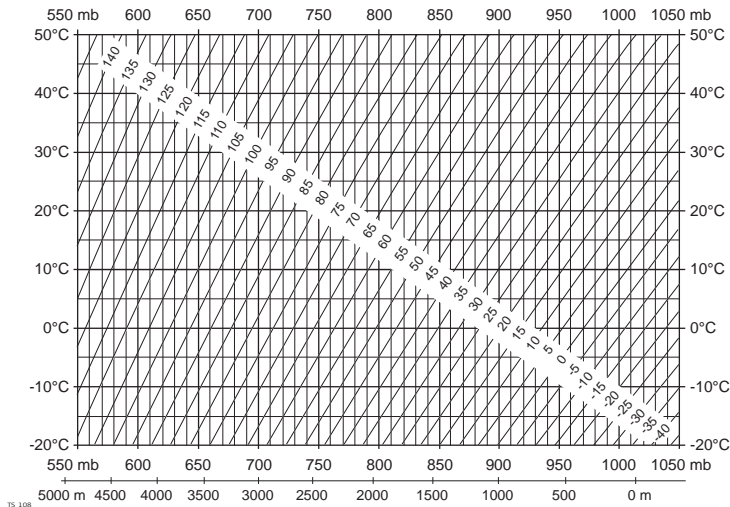

## Atmospheric correction °F


Atmospheric corrections in ppm with temperature [°F], air pressure [inch Hg] and height [ft] at 60 % relative humidity.

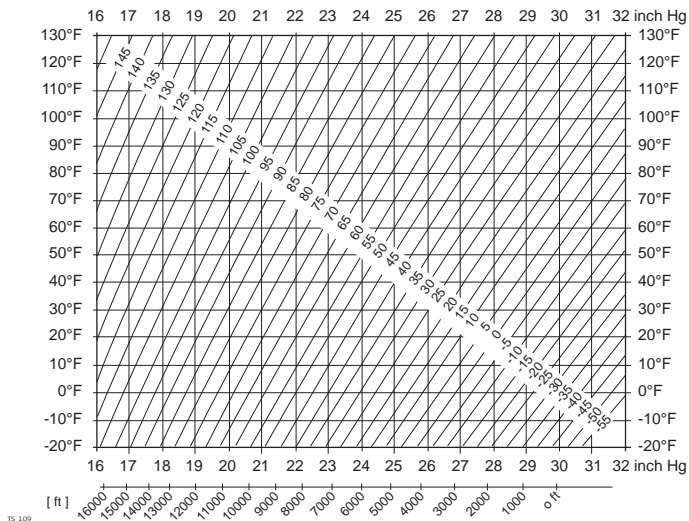




TS\_109

## 7.1.9 Reduction Formulas
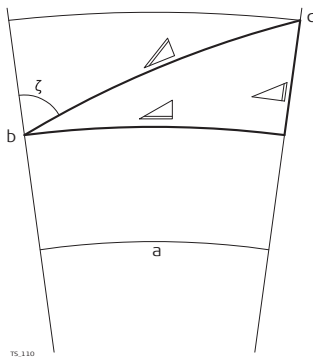
### Measurements



TS\_110

- a) Mean Sea Level
- b) Instrument
- c) Reflector
-  Slope distance
-  Horizontal distance
-  Height difference

### Reflector types

The reduction formulas are valid for measurements to all reflector types:

- measurements to prisms, to reflector tape and reflectorless measurements.

## Formulas

The instrument calculates the slope distance, horizontal distance, height difference in accordance with the following formulas:

$$\sphericalangle = D_0 \cdot (1 + \text{ppm} \cdot 10^{-6}) + \text{mm}$$

TS,111

$\sphericalangle$  Displayed slope distance [m]  
 $D_0$  Uncorrected distance [m]  
ppm Atmospheric scale correction [mm/km]  
mm Additive constant of the reflector [mm]

$$\sphericalangle = Y - A \cdot X \cdot Y$$

TS,112

$\sphericalangle$  Horizontal distance [m]  
 $\sphericalangle$  Height difference [m]

$$\sphericalangle = X + B \cdot Y^2$$

TS,113

Y  $\sphericalangle \cdot |\sin\zeta|$   
X  $\sphericalangle \cdot \cos\zeta$   
 $\zeta$  Vertical circle reading  
A  $(1 - k/2)/R = 1.47 \cdot 10^{-7} [\text{m}^{-1}]$   
B  $(1 - k)/2R = 6.83 \cdot 10^{-8} [\text{m}^{-1}]$   
k 0.13 (mean refraction coefficient)  
R  $6.378 \cdot 10^6$  m (radius of the earth)

Earth curvature (1/R) and mean refraction coefficient (k) (if enabled on the Refraction page in Main Menu: Config...\Instrument Settings...\TPS Corrections) are automatically taken into account when calculating the horizontal distance and height difference. The calculated horizontal distance relates to the station height and not to the reflector height.

## Distance measuring program Averaging

In the distance measuring program Averaging, the following values are displayed:

- D Slope distance as arithmetic mean of all measurements
- s Standard deviation of a single measurement
- n Number of measurements

These values are calculated as follows:

$$\bar{D} = \frac{1}{n} \cdot \sum_{i=1}^n D_i$$

TS\_114

$$s = \sqrt{\frac{\sum_{i=1}^n (D_i - \bar{D})^2}{n - 1}} = \sqrt{\frac{\sum_{i=1}^n D_i^2 - \frac{1}{n} \left( \sum_{i=1}^n D_i \right)^2}{n - 1}}$$

TS\_115

- $\bar{D}$  Slope distance as arithmetic mean of all measurements
- $\Sigma$  Sum
- $D_i$  Single slope distance measurement
- n Number of measurements
- s Standard deviation of a single slope distance measurement
- $\Sigma$  Sum
- $\bar{D}$  Slope distance as arithmetic mean of all measurements
- $D_i$  Single slope distance measurement
- n Number of distance measurements

The standard deviation  $S_{\bar{D}}$  of the arithmetic mean of the distance can be calculated as follows:

$$S_{\bar{D}} = \frac{s}{\sqrt{n}}$$

TS.116

- $S_{\bar{D}}$  Standard deviation of the arithmetic mean of the distance
  - s Standard deviation of a single measurement
  - n Number of measurements
-

## 7.2 Controller

### Design

Glass reinforced polymer housing with internal battery and radio modem.

### Control unit

Display: 1/4 VGA (320 x 240 pixels), graphics capable LCD, illumination, touch screen, colour display

Keyboard: 62 keys including 12 function keys, illumination

Angle Display 360°", 360° decimal, 400 gon, 6400 mil, V %

Distance Display m, ft int, ft us, ft int inch, ft us inch

Touch screen: Toughened film on glass

### Dimensions

Length [m]	Width [m]	Thickness [m]
0.218	0.123	0.047

### Weight

Type	Weight [kg]/[lbs]
Controller, with internal battery	0.795/1.753



## Recording

Data can only be recorded on the CompactFlash card.

Type	Capacity [MB]
CompactFlash card	• 256

## Power

Consumption [W]	External supply voltage
1.8	Nominal voltage 12 V DC (---) Voltage range 11.5 V-28 V

## Internal battery ZBA200

Battery	Voltage	Capacity	Operating time, typical
Li-Ion	7.4 V	2.2 Ah	9 h Radio link to instrument

## Environmental specifications

## Temperature

Type	Operating temperature [°C]	Storage temperature [°C]
Controller	-30 to +65	-40 to +80
Bluetooth	-25 to +65	-40 to +80
Colour display	-30 to +50	-40 to +80
Internal battery	-20 to +55	-40 to +70

## Protection against water, dust and sand

Protection
IP67 (IEC60529) Dust tight Waterproof to 1 m temporary immersion

## Humidity

Protection
Up to 100 % The effects of condensation are to be effectively counteracted by periodically drying out the controller.

## Interfaces

<b>RS232 No handshake</b>	<b>Bluetooth</b>	<b>USB</b>
LEMO port	Class 2	LEMO port

## Data format for RS232

The default values are:

Baud rate:	115200
Parity:	None
Terminator:	CR/LF
Data bits:	8
Stop bits:	1

## Ports

**8 pin LEMO-1**

For power and/or communication

## 7.3 Conformity to National Regulations

### 7.3.1 Instrument

#### Conformity to national regulations

- FCC Part 15 (applicable in US).
- Hereby, GeoMax AG, declares that the instrument Zoom80 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The declaration of conformity is available from GeoMax AG.



Class 1 equipment according European Directive 1999/5/EC (R&TTE) can be placed on the market and be put into service without restrictions in any EEA Member state.

- The conformity for countries with other national regulations not covered by the FCC part 15 or European directive 1999/5/EC has to be approved prior to use and operation.

#### Frequency band

2402 - 2480 MHz

#### Output power


Bluetooth: 5 mW

#### Antenna

Type: Internal Microstrip antenna  
Gain: 1.5 dBi

## 7.3.2 Controller

### Conformity to national regulations

- FCC Part 15 (applicable in US)
  - Hereby, GeoMax AG, declares that the Zoom80 C is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The declaration of conformity is available from GeoMax AG.
-  Class 1 equipment according European Directive 1999/5/EC (R&TTE) can be placed on the market and be put into service without restrictions in any EEA member state.
- The conformity for countries with other national regulations not covered by the FCC part 15 or European directive 1999/5/EC has to be approved prior to use and operation.

### Frequency band

Type	Frequency band [MHz]
Bluetooth	2402 - 2480
Spread Spectrum Transceiver	Limited to 2409 - 2435

**Output power**

Type	Output power [mW]
Bluetooth	2.5
Spread Spectrum Transceiver	< 100

**Antenna**

Type	Antenna	Gain [dBi]	Connector	Frequency band [MHz]
Bluetooth	Integrated antenna	-	-	-
Spread Spectrum Transceiver	Detachable $\lambda/4$ antenna	2	SMA	2409 - 2435

### 7.3.3 ZRT80

#### Conformity to national regulations

- FCC Part 15 (applicable in US)
- Hereby, GeoMax AG, declares that the ZRT80 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The declaration of conformity is available from GeoMax AG.



Class 2 equipment according European Directive 1999/5/EC (R&TTE) for which following EEA Member States apply restrictions on the placing on the market or on the putting into service or require authorisation for use:

- France
  - Italy
  - Norway (if used in the geographical area within a radius of 20km from the centre of Ny-Ålesund)
- The conformity for countries with other national regulations not covered by the FCC part 15 or European directive 1999/5/EC has to be approved prior to use and operation.

#### Frequency band

Limited to 2409 - 2435 MHz

#### Output power

< 100 mW (e. i. r. p.)

**Antenna**

Type:	$\lambda/2$ dipole antenna
Gain:	2 dBi
Connector:	Special customized SMB

---



## 8 International Limited Warranty, Software Licence Agreement

---

### **International Limited Warranty**

This product is subject to the terms and conditions set out in the International Limited Warranty which you can download from the GeoMax home page at <http://www.geomax-positioning.com> or collect from your GeoMax distributor. The foregoing warranty is exclusive and is in lieu of all other warranties, terms or conditions, express or implied, either in fact or by operation of law, statutory or otherwise, including warranties, terms or conditions of merchantability, fitness for a particular purpose, satisfactory quality and non-infringement, all which are expressly disclaimed.

---

### **Software Licence Agreement**

This product contains software that is preinstalled on the product, or that is supplied to you on a data carrier medium, or that can be downloaded by you online according to prior authorisation from GeoMax. Such software is protected by copyright and other laws and its use is defined and regulated by the GeoMax Software Licence Agreement, which covers aspects such as, but not limited to, Scope of the Licence, Warranty, Intellectual Property Rights, Limitation of Liability, Exclusion of other Assurances, Governing Law and Place of Jurisdiction. Please make sure, that at any time you fully comply with the terms and conditions of the GeoMax Software Licence Agreement.

Such agreement is provided together with all products and can also be referred to and downloaded at the GeoMax home page at <http://www.geomax-positioning.com> or collected from your GeoMax distributor.

You must not install or use the software unless you have read and accepted the terms and conditions of the GeoMax Software Licence Agreement. Installation or use of the software or any part thereof, is deemed to be an acceptance of all the terms and conditions of such Licence Agreement. If you do not agree to all or some of the terms of such Licence Agreement, you must not download, install or use the software and you must return the unused software together with its accompanying documentation and the purchase receipt to the distributor from whom you purchased the product within ten (10) days of purchase to obtain a full refund of the purchase price.

---

# Index

---

## A

A10 .....	13
Accuracy	
Angle measurement .....	154
IR mode .....	156
LO mode .....	159
RL mode .....	158
Adjustment	
Combined (I, t, i, c and Aim360) .....	86
Electronic .....	80
Inspecting laser plummet .....	99
Inspecting the laser plummet .....	99
Mechanical .....	81
Of circular level on instrument .....	96
Of circular level on prism pole .....	98
Of circular level on tribrach .....	96
Preparation .....	84
Titling axis (a) .....	91
Adjustment Errors	
View current .....	81

## Aim360

Accuracy with the circular prism .....	162
Description .....	130, 161
Positioning of crosshairs .....	85
System accuracy .....	162
Angle measurement .....	154
Antenna .....	180
ZRT80 .....	184
Autodetect behaviour .....	56
ZRT80 .....	56
Automatic Corrections .....	153

## B

Batteries	
Operation, Discharging .....	62
Battery	
Icon .....	46
Labelling .....	145
Technical data ZBA400 .....	150
Bluetooth portr	
Graphical overview with ZRT80 .....	25
Bluetooth, icon .....	46

**C**

Capacity, memory .....	177
CAPS .....	33
CE .....	29, 33
Check & Adjust .....	80
CompactFlash card	
Insert .....	70
Remove .....	70
CompactFlash Card .....	20
Format card .....	72
Icon .....	46
Compensator .....	147
Container Contents	
For instrument .....	22
Control unit .....	148
Controller	
Underside .....	27
Upside .....	26
Conversion of data .....	21
Corrections	
Automatic .....	153
Scale .....	166

**D**

Data conversion .....	21
Data Conversion .....	20
Data Storage .....	20
Data transfer to GGO .....	21
Description of the system .....	11
Dimensions	
Of instrument .....	149
Distance Measurement	
Any surface mode .....	157
LO mode .....	159
Prism mode .....	155
Documentation .....	5
Drive	
PC card, on office computer .....	21
Drives .....	150

**E**

Edit	
Value in input field .....	38
Electronic Adjustment .....	80
Electronic Distance Measurement EDM	
accXess .....	13
Description .....	13
Screen icons .....	45, 46

ENTER .....	30, 34	Turn on and turn off .....	43
Environmental Specifications .....	151	Weight .....	149
ESC .....	29, 33	Instrument Models .....	14
<b>F</b>		Instrument Setup	
FCC Statement .....	143	For remote control .....	51
Frequency Band .....	180	Intended Use .....	109
ZRT80 .....	183	Internal memory, icon .....	46
<b>G</b>		International Limited Warranty .....	185
GGO, description .....	12	<b>K</b>	
Guidelines for Correct Results .....	77	Key Combinations .....	34
<b>I</b>		Keyboard .....	28
Icons .....	45	Controller Graphical overview .....	32
Insert		Locking and unlocking .....	43
CompactFlash card .....	70	Operating principles .....	37
Instrument		Keys .....	29
characteristics .....	15	Combinations controller .....	34
Dimensions .....	149	Keys, alpha .....	33
Ports .....	148	Keys, Alphanumeric .....	29
Setup .....	48	Keys, Arrow .....	30, 34
Technical data .....	180	Keys, Combinations .....	31
Technical Data .....	147	Keys, controller .....	33
Turn off .....	34	Keys, Function .....	30, 33
		Keys, Hot .....	29, 33

**L**

Labelling .....	145
ZBA200 .....	145
Laser	
Classification .....	122
Laser Classification	
Aim360 .....	130, 161
Integrated Distancer, Invisible Laser .....	123
Integrated Distancer, Visible Laser .....	125
Scout360 .....	132, 165
Laser plummet	
Inspect .....	99
Safety directions .....	136
Technical data .....	150
Level .....	31, 147
Lights .....	31
Li-Ion battery	
Storage .....	104
Lock, keyboard .....	43

**M**

Mechanical Adjustment .....	81
Menu, selecting from a .....	37

**N**

Navigation Light	
Safety directions .....	134
Navigation Light NavLight	
Technical data .....	153

**O**

ON .....	29, 33
Output Power .....	180
ZRT80 .....	183

**P**

Page	
Selecting from a .....	38
Pages down .....	31
Pages up .....	31
PC card drive on office computer .....	21
Ports .....	148
Power supply .....	19
Precise Measurements .....	81
PROG .....	29, 33

**Q**

Quick coding, icon .....	47
Quick settings .....	31

<b>R</b>			
Radio Modem			
Available radios .....	16		
Recording .....	150, 177		
Reduction Formulas .....	172		
Reflectors .....	152		
Remove			
CompactFlash card .....	70		
Responsibilities .....	114		
<b>S</b>			
Safety Directions .....	108		
Screen .....	35		
Scroll bar, description .....	36		
Setup			
For remote control .....	51		
Instrument .....	48		
SHIFT .....	30, 33, 46		
Software			
Application programs .....	18		
Language software .....	17		
Software type .....	17		
Software upload .....	18		
System software .....	17		
Software Licence Agreement .....	185		
		SPACE .....	34
		Survey Application .....	74
<b>T</b>			
Technical Data			
Dimensions .....	176		
Display and keyboard .....	176		
Environmental specifications .....	178		
Ports .....	179		
Power supply .....	177		
Weight .....	176		
Telescope .....	147		
Temperature			
Battery Internal			
Operating .....	151		
Storage .....	151		
Bluetooth			
Operating .....	151		
Storage .....	151		
CompactFlash Card			
Operating .....	151		
Storage .....	151		
Instrument			
Operating .....	151		
Storage .....	151		

Temperature range	
Product, drying .....	105
Touch Screen, operating principles .....	37
Transfer raw data to GGO .....	21
Turn instrument off .....	34

**U**

Unlock, keyboard .....	43
USER .....	29, 34
User Interface .....	28
User Manual	
Validity of .....	4

**V**

Value	
Edit in input field .....	38
View Current Adjustment Errors .....	81

**W**

Weight	
Of instrument .....	149
Windows key symbol .....	34

**Z**

ZRT80	
Description .....	14
Setup for remote control .....	51
Technical data .....	183





# GeoMax Zoom80 Series

---



**794008-1.0.0en**

**Original text**

© 2012 GeoMax AG, Widnau, Switzerland